

B&G

Equipment Repair Manual



CONTENTS.

03

TANK SPRAYERS

- 3 Extenda-ban Valve
- 4 Next Gen Extenda-ban Valve
- 5 XR-Valve
- 6 Ban-Drip Valve
- 7 Portable Aerosol System
- 9 Pressurizing Tank Top
- 10 Spray Tank, Hose and Pump
- 11 Extensions
- 12 Tip Assemblies and Nozzles
- 13 Straws and Needles
- 14 Valve Repair Kits
- 17 Problems and Solutions

20

BOTTLE SPRAYERS

- 20 QT-1 Sprayers
- 23 AccuSpray Professional
- 24 AccuSpray Standard
- 25 Spot SprayR
- 26 Aerosol Delivery Unit

27

CART SPRAYERS

- 27 Portable Aerosol System/ Cart
- 28 Wood Treatment System

32

FOGGERS

- 32 2600 Flex-A-Lite
- 33 2300 Ultra-Lite
- 33 2400 My-TI-Lite
- 34 Hurricane ES
- 34 Hurricane Ultra II
- 37 Versa-Fogger

38

TERMITE TOOLS

- 38 ROBCO QCG | SRG Gun
- 39 Versatool | Versagun Valve
- 40 Tips | Rodding Pipes | Cone Seals
- 41 SSI-4 | SSI-14
- 42 Versatool Slab Injector 484
- 43 TM-1 Termite Monitor | Seals

44

DUSTERS

- 44 Mini-Duster-R
- 45 Hand Dust-R
- 46 Long-Reach Dust-R
- 47 2250 Electric Duster
- 48 2200 Pressure Duster
- 49 Bulb Duster
- 50 Versaduster

51

FOAMERS

- 51 Versafoamer HH
- 52 Versafoamer 4000
- 53 Wood Treatment System

54

BAIT STATIONS AND MONITORS


- 54 Bait Station
- 55 TM-1 Termite Monitor

57

HAND-OUT SHEETS

- 57 Extenda-ban,
Ban-Drip Valve
- 58 Sprayer Repair
and Maintenance

EXTENDA-BAN VALVE

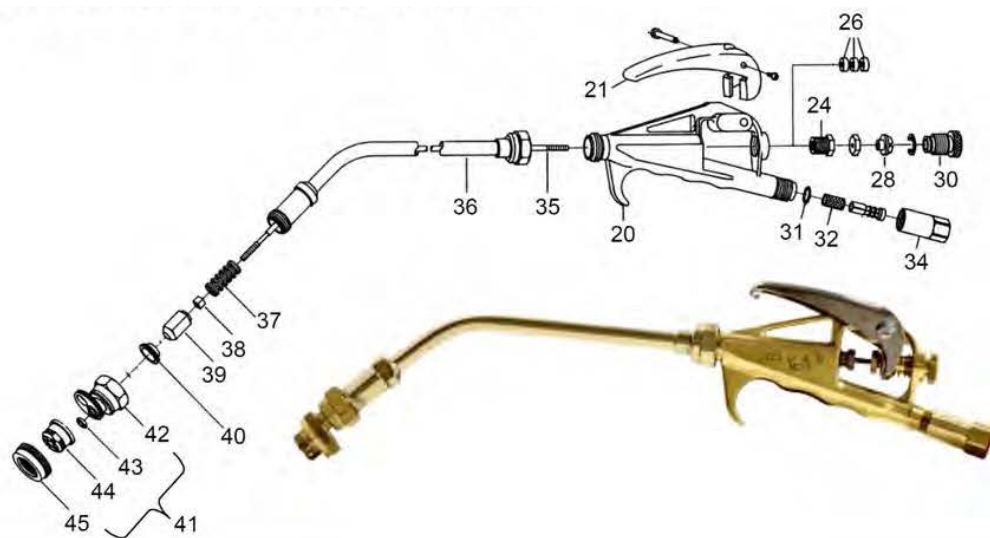


9 in. extension - #22042100
 18 in. extension - #22042200
 24 in. extension - #22042700

Extenda-Ban Valve

#	Part	Order #	Description
20	VB-147	22044450	Valve body
21	VT-140	22042800	Valve Trigger Kit (includes SH-142 Screw housing, TS-141 Trigger screw)
24	PN-150-2	22042455	Packing nut (stainless steel)
26	VP-151	22045099	Valve packing washer
28	AS-148	22044500	Adjustment Screw Kit (includes LN-149 Lock nut, SR-161 Snap ring)
30	SL-162	22046700	Safety lock nut
31	NG-146	22044200	Nylon gasket
32	MS-145-50	22043800	Mesh Strainer Kit (includes SS-144 Strainer support)
34	SA-143	22043400	Strainer housing
35	VC-152	22045300	Valve cable, 9 in.
	VC-153	22045400	Valve cable, 18 in.
	VC-163	22045450	Valve cable, 24 in.
36	VE-154	22045500	Valve extension, 8 in. (brass)
	VE-155	22045600	Valve extension, 18 in. (brass)
	VE-164	22045650	Valve extension, 24 in. (brass)
	VE-154-SS	22045510	Valve extension, 8 in. (stainless steel)
	VE-155-SS	22045610	Valve extension, 18 in. (stainless steel)
	VE-164-SS	22045710	Valve extension, 24 in. (stainless steel)
37	VS-156	22045700	Valve spring
38	SSL-157	22045900	Seat stem nut
39	SS-158	22046100	Seat stem
40	SP-159	22046300	Soft seat gasket
41	5850-CC	22049466	Multeejet tip assembly
42	9751-M	22034700	Multeejet tip holder
43	4190	22034700	Viton gasket
44	5800-CC	22049467	Multeejet CC tip
45	4596	22034500	Tip retainer

NEXT GENERATION VALVE

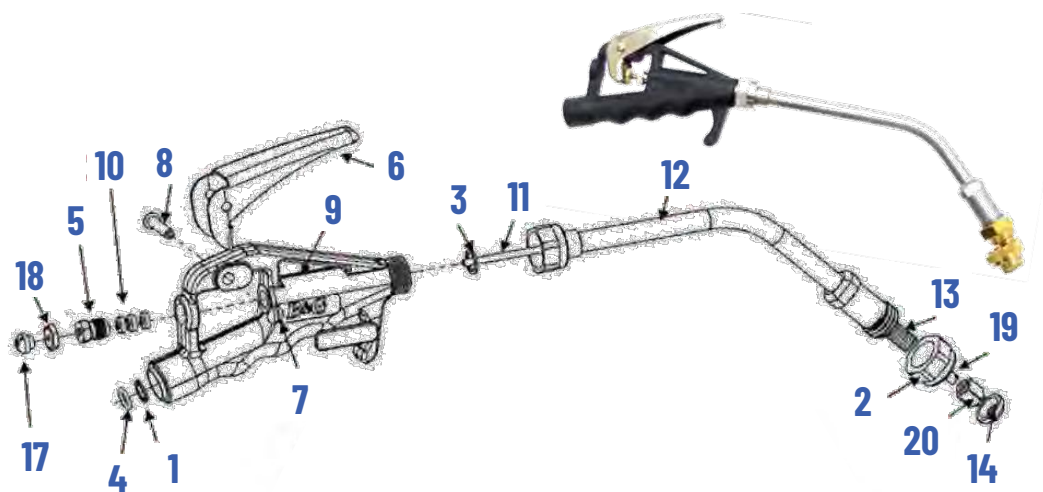

#	Part #	Description
1	22043900	Screen filter / 100 mesh
2	22033100	1325 Tip cap
3	22037507-N	Gasket, extension - valve
4	22037530	O-Ring
5	22042455	PN-150-2, Packing nut
6	22042800-P	Valve trigger, VT-140
7	22043000	Trigger screw, TS-141
8	22043200	Screw housing, SH-142
9	22044405	Valve body
10	22045099	VP-151, Packing washers
11	22045400	VC-153, Valve cable 18"
11	22045450	VC-163, Valve cable 24"
11	22045300	VC-152, Valve cable 8"
12	22045610	VE-155, 18" Tube assembly
12	22045710	VE-164, 24" Tube assembly
12	22045510	VE-154, 8" Tube assembly
13	22045700	VS-156, Valve spring
14	22046300	SP-159, Soft seat gasket
17	P-22044500	AS-148, Adjustment screw
18	P-22044700	Cable lock nut
19	P-22045900	Square nut
20	P-22046100	Shut-off tip

XR-VALVE



#22037500



XR - 100:Repair Kit




#22037510

GT - 100 Repair Kit



#2204960

BAN-DRIP VALVE

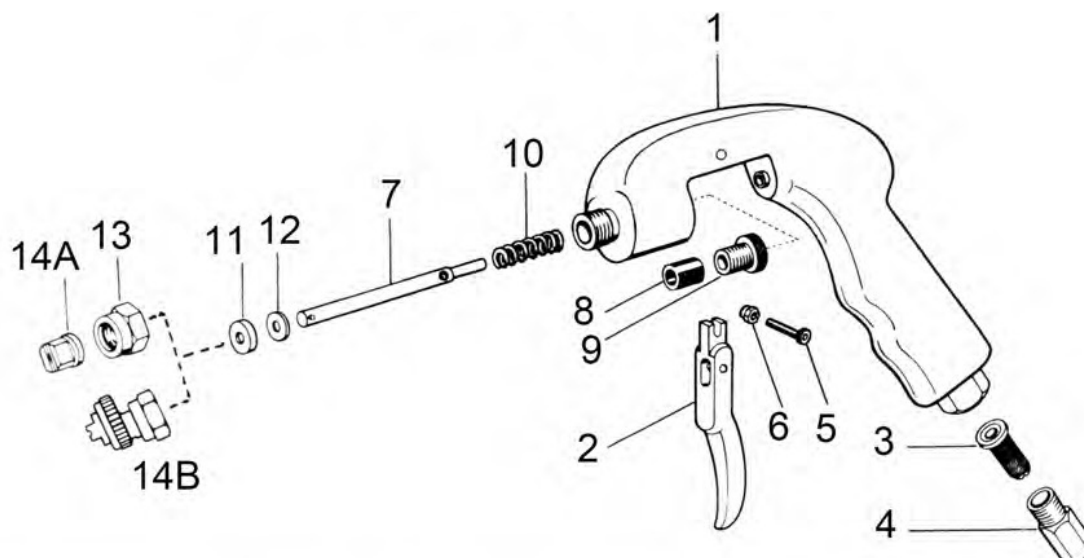



Ban-Drip Valve

Part Description

1	VB-40	Valve body	8	PN-47	Brass packing nut
2	VT-41	Valve trigger	9	RP-48	Rod packing
3	SA-42	Mesh strainer	10	RS-49	Rod spring
4	SB-43	Pipe thread strainer	11	SGH-50	Seat gasket holder
5	TS-44	Trigger screw	12	TSG-51	Seat gasket
6	TN-45	Trigger nut	13	TC-52	Tip cap
7	VR-46	Valve rod and pin	14A	800067	Fine fan tip
			14B	5850	Multeejet tip assembly



#22039600

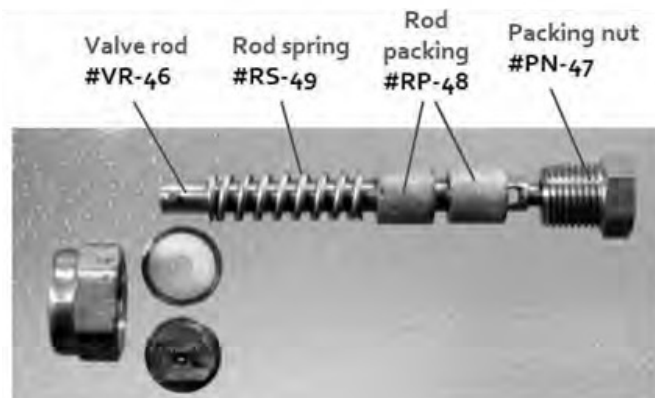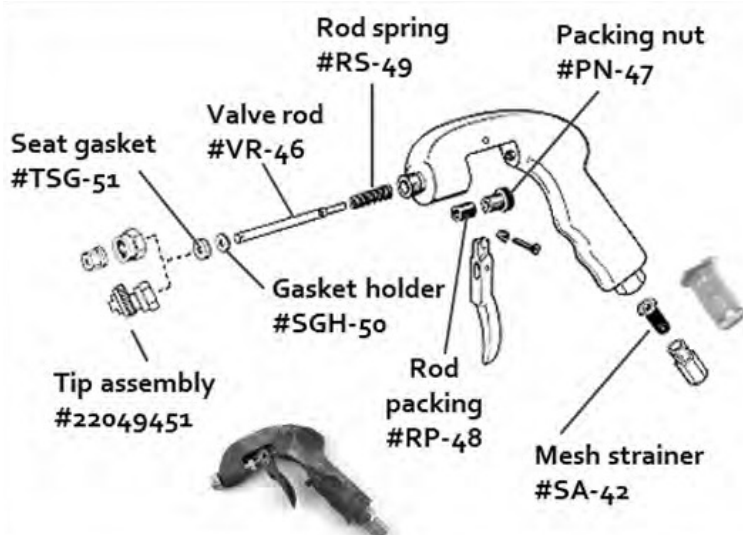

PORTABLE AEROSOL SYSTEM

- 1** #1640019 / 9 in. extension
#1640018 / 18 in. extension
- 2** #16400127 - Aerator assembly
#16400128 - O-ring
- 3** #16400129 - Nozzle (only)
- 4** #22026500 - Gauge assembly
- 5** #16200007 - 110v compressor
#16289998 - 220v compressor




Hose Repair Kit # 16400130
See also page 28



Mesh Filter Kit # 22043800




#16401643
Hose Replacement

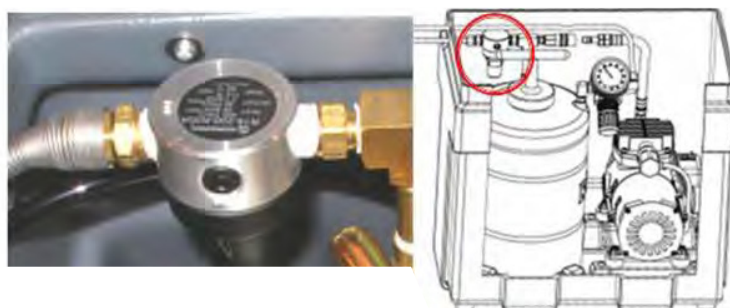

Regulator # 95127013

PORTABLE AEROSOL SYSTEM

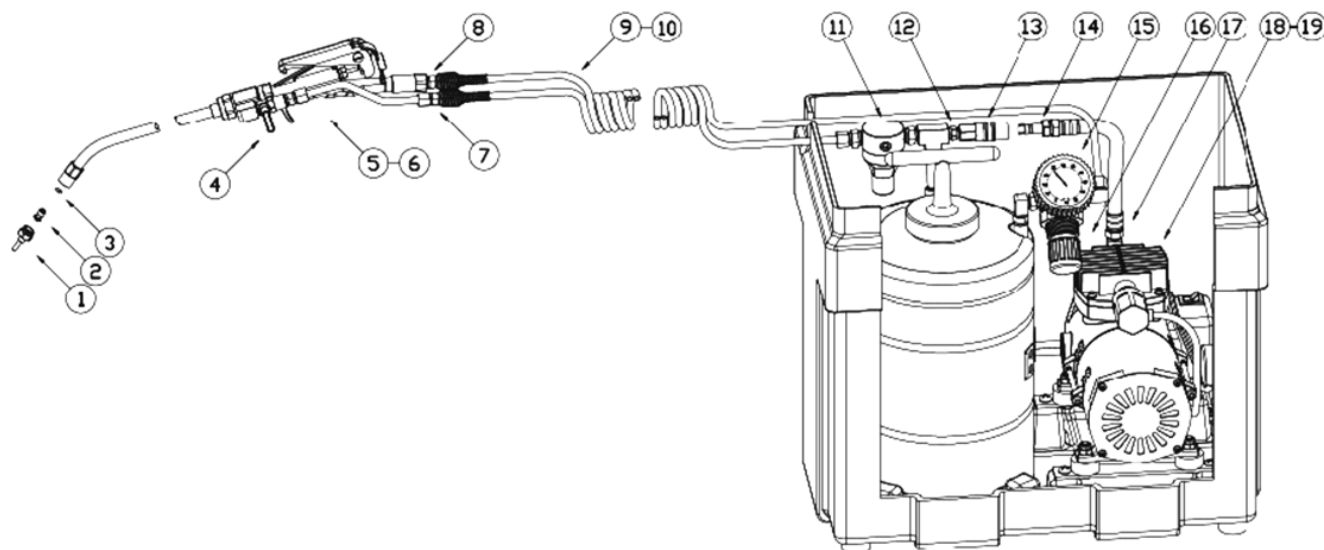

ITEM	PART NUMBER	DESCRIPTION
1	16400129	Air cap nozzle
2	16400127	Internal mix nozzle
3	16400128	O-ring, Viton
4	16400026	Ball valve
5	16400118	18 in. extension assembly
6	16400109	9 in. extension assembly
7	22067827	Connector 1/4 tube x 1/8 NPT
8	22067809	Connector 1/4 tube x 1/8 NPT
9	16401642	Dual 10 in. hose assembly
10	16401643	Dual 15 in. hose assembly
11	95127013	Regulator, non-adjustable
12	24040106	Check valve
13	22071829	Female quick connect
14	22071811	Male quick connect
15	22071635	Gauge
16	95127014	Regulator, liquid
17	22030217	Hose assembly
18	16200038	Air compressor, 110 AC
19	16400110	Air compressor, 220 AC


PRESSURIZING TANK TOP

Tank Gasket




Battery Replacement

#22046019

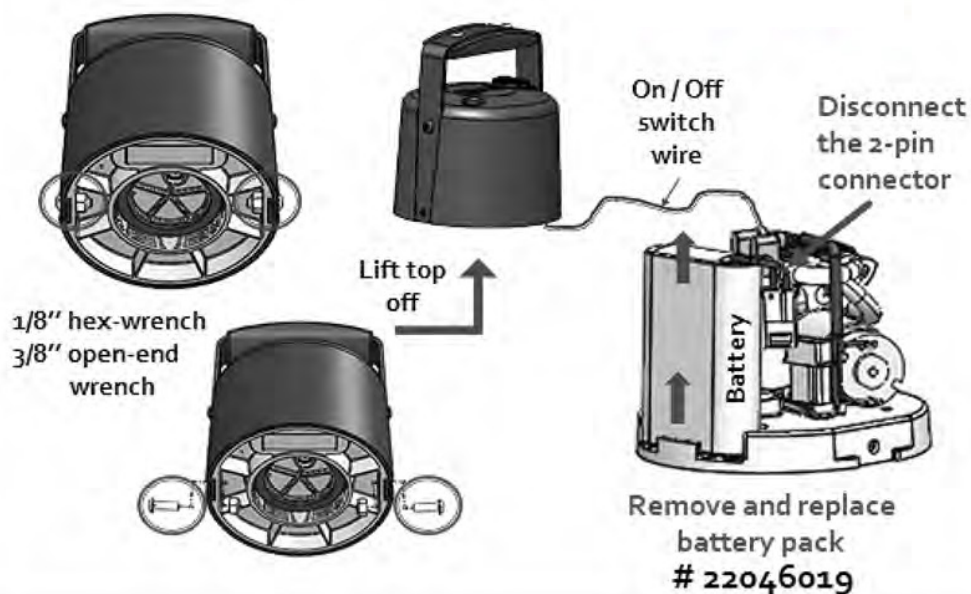


TANK, HOSE AND PUMP

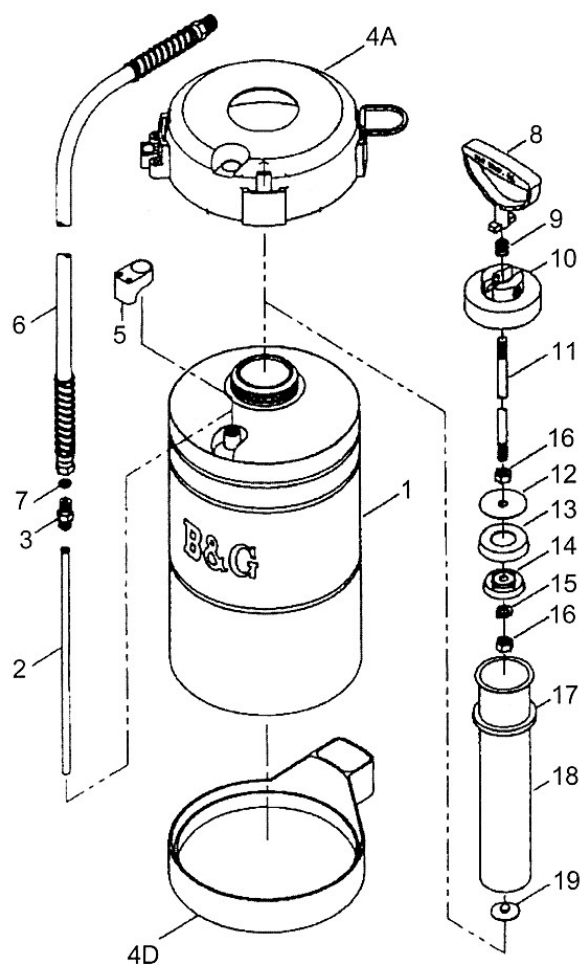

Stainless Steel Sprayer

#	Part	Description
1	22024800	Tank, ½ gallon
	22025000	Tank, 1 gallon
	22025100	Tank, 2 gallon
	22025200	Tank, 3 gallon
	22025250	Tank, 5 liter
2	22025600	Siphon tube, ½ gal.
	22025700	Siphon tube, 1 gal.
	22025800	Siphon tube, 2 gal.
	22025901	Siphon tube, 3 gal.
	22025950	Siphon tube, 5 liter
3	22025300	Adapter, hose
4A	22049476	Tank top (1 gal.)
4D	22049477	Tank bottom
5	22049475	Tip holder
6	22030100	Hose, 4 ft. red
7	22030400	Hose washer
8	22029800	Pump handle
9	22029900	Pump lock spring
10	22029700	Pump cap
11	22029400	Plunger rod, ½ gal.
	22029500	Plunger rod, 1 gal.
	22029650	Plunger rod, 2 gal., 5 L
	22029600	Plunger rod, 3 gal.
12	22029200	Back plate
13	22029000	Polypropylene cup
14	2208600	Cup spreader plate
15	22028400	Lock washer
16	22028250	Plunger nut
17	22028000	Pump gasket
18	22027400	Pump tube, ½ gal.
	22027500	Pump tube, 1 gal.
	22027500	Pump tube, 2 gal.
	22027600	Pump tube, 3 gal.
19	22027200	Check valve

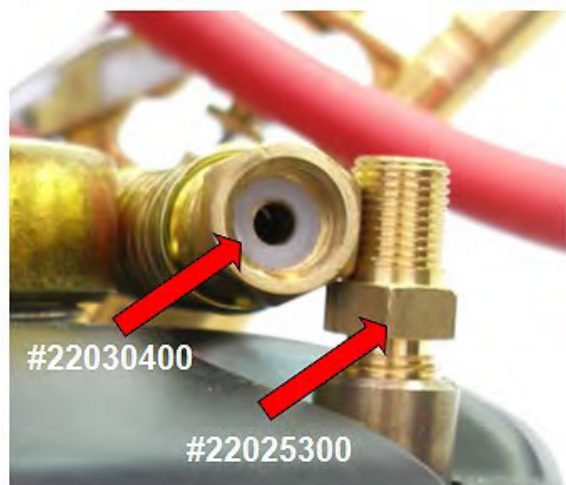

EXTENSIONS



Stainless Steel Extension	Order #
9" Stainless Steel Extension	22045510
18" Stainless Steel Extension	22045610
24" Stainless Steel Extension	22045710



VE-154	22045500	Extension, Brass 9"
VE-155	22045600	Extension, Brass 18"
VE-164	22045650	Extension, Brass 24"
VE-154-SS	22045510	Extension, Stainless Steel 9"
VE-155-SS	22045610	Extension, Stainless Steel 18"
VE-164-SS	22045710	Extension, Stainless Steel 24"


TIP ASSEMBLIES AND NOZZLES



#22049451
5850



#22083602
AV-210

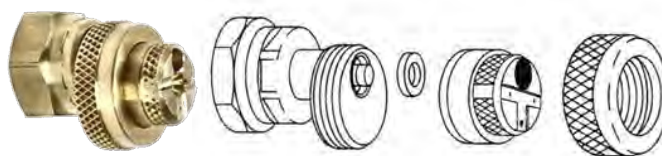

TIP ASSEMBLY PARTS



#22083601
POLY



#22049466
5850-CC

Tip Assemblies

DESCRIPTION	ORDER #	MODEL #
Multeejet C&C Tip Assembly (complete)	22049466	5850-CC
Multeejet Tip Assembly (complete)	22049451	5850
Pin-To-Cone (available with various flow rates)	22036600	5500-Y-2
Adjustable Pin-to-Cone	22083602	AV-210
Single Tips – A wide range available on request.		



5800-CC



5800



5900

Nozzles

DESCRIPTION	ORDER #	MODEL #
Multeejet C&C Tip (4-way)	22049467	5800-CC
Multeejet Tip Only (no C&C orifice)	22049452	5800
Adjustable Tip Assembly	22035200	5900

STRAWS AND NEEDLES



1052



100-8



5701



100-CC



5700-B



1603



Wood Tip




Whit - 1



Whit - 4

DESCRIPTION	ORDER #	MODEL #
Plastic C&C Straw (fits directly on a gun with a 1325 Tip Cap)	22049500	100-CC
Ban-Drip Fan Tip (3/16" dia., 12" long) (requires 1325 Cap)	22039677	1052
1" plastic C&C Straw (fits in Multeejet C&C tip)	22071703	1603
6" plastic C&C Straw (fits in Multeejet C&C tip)	22049200	5700-B
3.5" Stainless Steel Injector Needle (fits in Multeejet C&C tip)	22049400	5700-SS
2" Stainless Steel Void Tip (fits in Multeejet C&C tip)	22071785	5700-2
4" Stainless Steel 4-way Void Tip (fits in Multeejet C&C tip)	22049425	5701
8" Mulch/Ant Mound Probe (fits any gun/ext. with 1325 Tip Cap)	22071684	100-8
1" Wood Injection Tip (requires 1325)	22071824	Whit-1
4" Wood Injection Tip (requires 1325)	22071827	Whit-4
1/2" Wood Injection Tip "better wood seal design" (requires 1325)	24040077	WoodTip

NEXT GEN VALVE REPAIR KIT

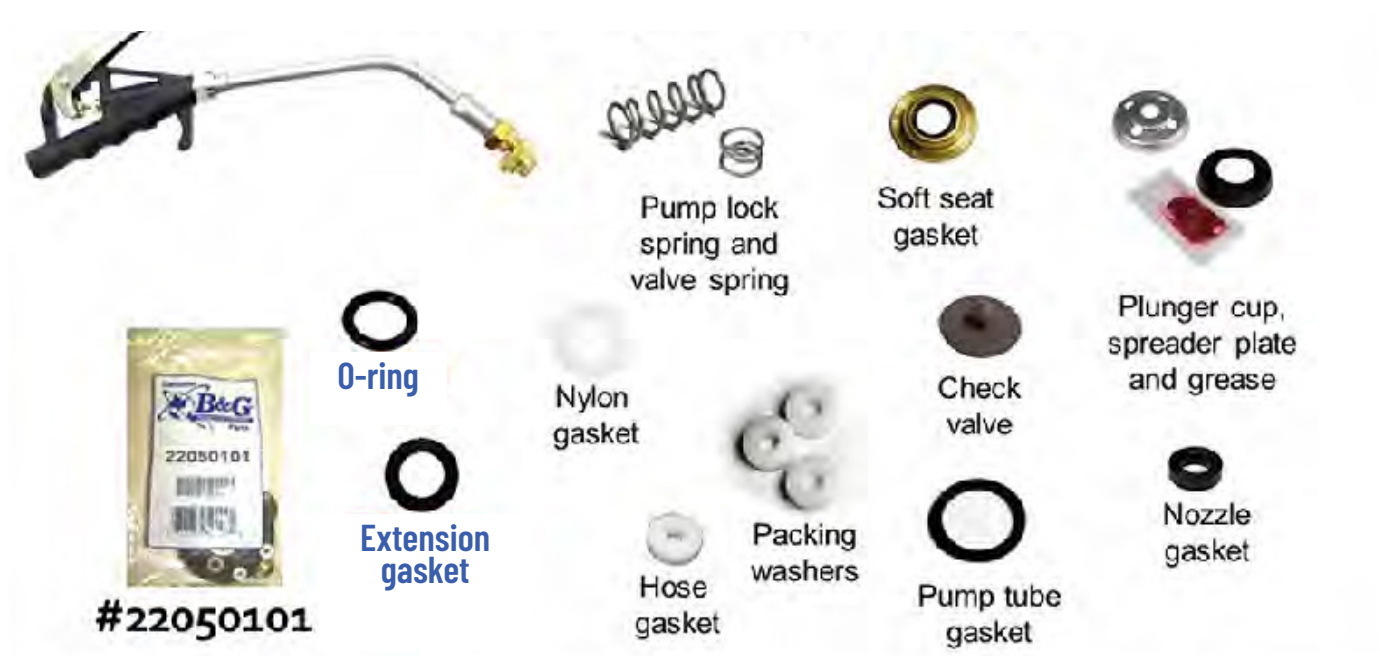

Next Gen Valve Repair Kit GD-124X

(# 22050101)

1	PV-266	22027200	Check valve
1	P-268	22028000	Tank gasket
1	NP-270	22028600	Spreader plate
1	NP-277	22029000	Plunger cup, plastic
1	P-276	22029900	Lock spring
1	D-51-P	22030400	Washer (hose coupling)
1	4190	22034700	Gasket (Viton)
1	NG-146	22044200	Gasket (Nylon)
3	VP-151	22045099	Valve packing washers
1	VS-156	22045700	Valve spring
1	SP-159	22046300	Soft seat gasket
1	-----	22037507-N	Gasket, extension-valve (Nex Gen Valve)
1	-----	22037530	O-ring (Nex Gen Valve)

EXTENDA-BAN VALVE REPAIR KIT

GD - 124 Repair Kit



#22050100



Pump lock spring and valve spring



Soft seat gasket



Plunger cup, spreader plate and grease



Check valve



Packing washers



Nozzle gasket



Hose gasket



Pump tube gasket

EXTENDA-BAN VALVE REPAIR KIT GD-124 #22050100

1	PV-266	22027200	Check valve
1	P-268	22028000	Tank gasket
1	NP-270	22028600	Spreader plate
1	NP-277	22029000	Plunger cup, plastic
1	P-276	22029900	Lock spring
1	D-51-P	22030400	Washer (hose coupling)
1	4190	22034700	Gasket (Viton)
1	NG-146	22044200	Gasket (Nylon)
3	VP-151	22045099	Valve packing washers
1	VS-156	22045700	Valve spring
1	SP-159	22046300	Soft seat gasket

XR-VALVE, BAN-DRIP REPAIR KIT

GT - 100 Repair Kit



XR-VALVE REPAIR KIT GT-100 (# 22049600)

1	PV-266	22027200	Check valve
1	P-268	22028000	Tank gasket
1	NP-270	22028600	Spreader plate
1	NP-277	22029000	Plunger cup, plastic
1	P-276	22029900	Lock spring
1	D-51-P	22030400	Washer (hose coupling)
1	4817	22037800	Valve stem sub-assembly
1	4932	22038200	Brass guide
1	-----	22038900	O-ring #1
1	4143	22039100	Gasket, copper
1	VS-156	22045700	Valve spring

BAN-DRIP VALVE REPAIR KIT GB - 114

(# 22049900)

1	PV-266	22027200	Check valve
1	P-268	22028000	Tank gasket
1	NP-270	22028600	Spreader plate
1	NP-277	22029000	Plastic plunger cup
1	P-276	22029900	Lock spring
1	D-51-P	22030400	Washer (hose coupling)
1	4190	22034700	Gasket (Viton)
1	RP-48	22041100	Packing rod
1	RS-49	22041300	Rod spring
1	TSG-51	22041700	Seat gasket (Teflon)



PROBLEMS AND SOLUTIONS

P. Tank is not holding pressure; pump is working but no pressure remains in the tank.

S. Inspect pump gasket, replace if cracked.

P. Tank is not getting pressure; the pump seems to be working but no pressure builds in the tank.

S. Add grease to plastic cup in pump tube, or replace cup and spreader plate.

P. Pump tube fills with liquid, pumping is difficult.


S. Clean dirt from bottom of pump tube, replace check valve at bottom.

P. Will not spray; tank holds pressure but there is no spray from the nozzle, this is a new sprayer.


S. Replace Hose washer, it may have been damaged when hose was attached to tank; the junction may have been over-tightened!

P. Tank holds pressure, but there is no spray from nozzle (old sprayer).

- S.** (1) Siphon tube is clogged or cracked, it must be cleaned or replaced.
- (2) Clean the mesh strainer at the end of the hose near the valve.
- (3) Clean the nozzle with a soft brush.
- (4) Clean or replace Soft seat gasket at end of the extension.

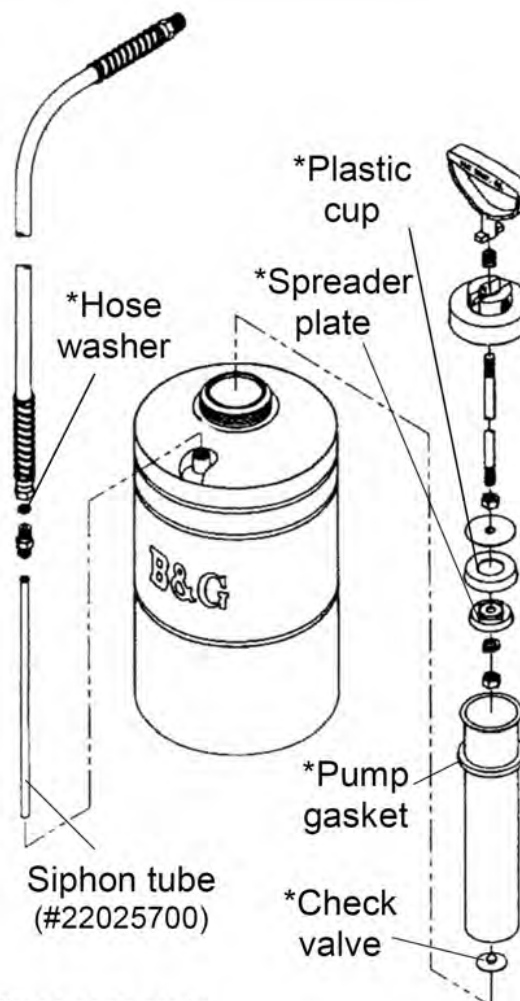

*These parts are in Gasket Kit GD-124

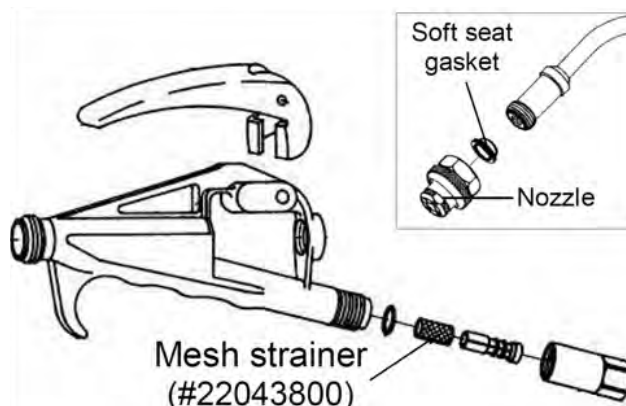

PROBLEMS AND SOLUTIONS

P. Valve is leaking around the packing nut, and the handle is wet.

- S.** (1) Tighten the packing nut $\frac{1}{4}$ turn only.
(2) Replace the valve packing washers.

2 washers with brass packing nut





3 washers with stainless steel packing nut

P. Extension is leaking at the tip, a constant drip from the nozzle.

- S.** (1) Clean or replace nozzle O-ring.
(2) Clean end of seat stem.
(3) Clean or replace soft seat gasket.
(4) Replace the valve spring.

P. Hose is leaking at the connection with the tank; leaks when tank is pressurized.

- S.** Replace the hose washer at the end of the hose; do not over-tighten the connection when reconnecting the hose to the tank.

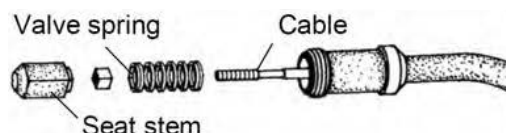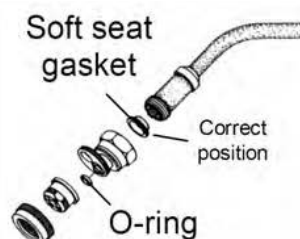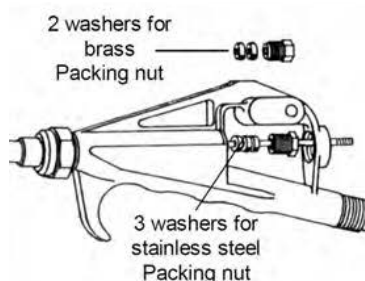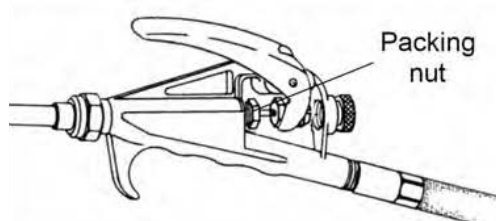


PROBLEMS AND SOLUTIONS



QT-1 Sprayers

#	Order #	Description
1	FL0601-01	Bottle
2	FL0601-02	Check valve
3	FL0601-03	Pump tube
4	FL0601-04	Piston
5	FL0601-05	Piston cup seal
6	FL0601-06	Pump rod
7	FL0601-07	Handle
8	FL0601-08	Gasket #3
9	FL0601-09	Gasket #6
10	FL0601-10	Sprayer handle
11	FL0601-11	Gasket #5
12	FL0601-12	Pump handle </td
13	FL0601-13	Hex nut
14	FL0601-14	Washer
15	FL0601-15	Cut off shaft
16	FL0601-16	Filter
17	FL0601-17	O-ring #3
18	FL0601-18	Spring
19	FL0601-19	Gasket #1
20	FL0601-20	Connector
21	FL0601-21	Connector
22	FL0601-22	Gasket #2
23	FL0601-23	Nozzle
24	FL0601-24	O-ring #1
25	FL0601-25	Siphon tube

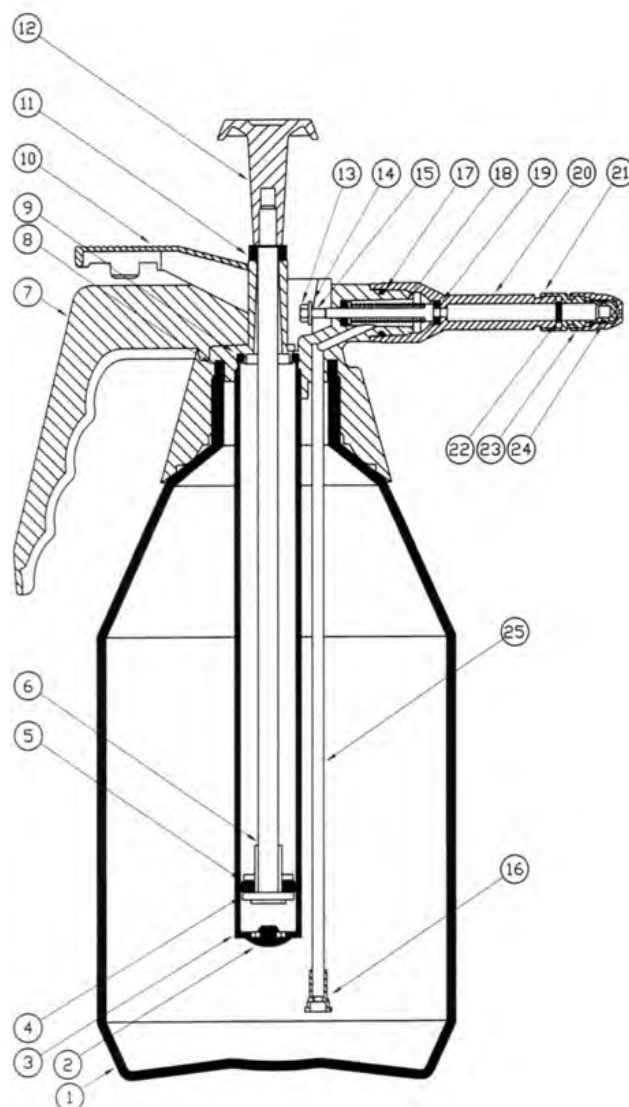

QT-1 SPRAYERS

DESCRIPTION	ORDER #
QT-1 with FN-2280 foam tip	17017408
QT-1 with 5700-B tip	17017404
QT-1 with SST Inject tip	17017403
QT-1 with Adjustable tip	17017401
QT-1 with Fan tip	17017407



Crack-Crevice tip

DESCRIPTION	ORDER #
QT-1 with FN-2280 foam tip	17017408
QT-1 with 5700-B tip	17017404
QT-1 with SST Inject tip	17017403
QT-1 with Adjustable tip	17017401
QT-1 with Fan tip	17017407




Injection tip
8004

QT-1 SPRAYERS

DESCRIPTION	ORDER #
QT-1 with FN-2280 foam tip	17017408
QT-1 with 5700-B tip	17017404
QT-1 with SST Inject tip	17017403
QT-1 with Adjustable tip	17017401
QT-1 with Fan tip	17017407



1/8th turn

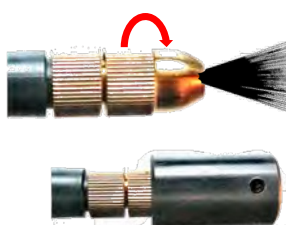

Foam tip
#17017408

Screen
mesh

DESCRIPTION	ORDER #
QT-1 with FN-2280 foam tip	17017408
QT-1 with 5700-B tip	17017404
QT-1 with SST Inject tip	17017403
QT-1 with Adjustable tip	17017401
QT-1 with Fan tip	17017407




Fan spray tip



8004


QT-1 SPRAYERS

DESCRIPTION	ORDER #
QT-1 with FN-2280 foam tip	17017408
QT-1 with 5700-B tip	17017404
QT-1 with SST Inject tip	17017403
QT-1 with Adjustable tip <i>Not shown</i>	17017401
QT-1 with Fan tip	17017407

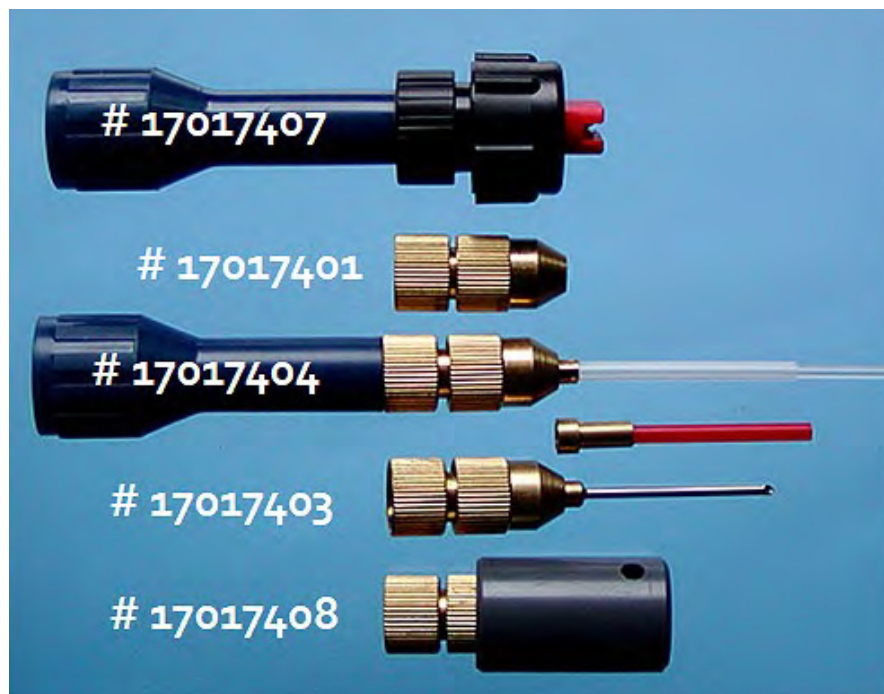

ACCUSPRAY PROFESSIONAL


Brass pump tube, stainless steel plunger rod, Viton check valve

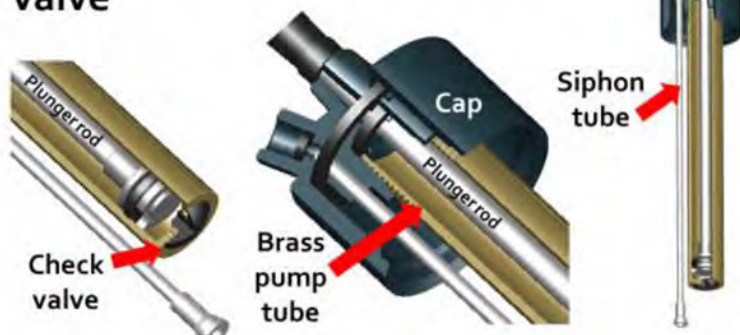

#24000200




Repair Kit

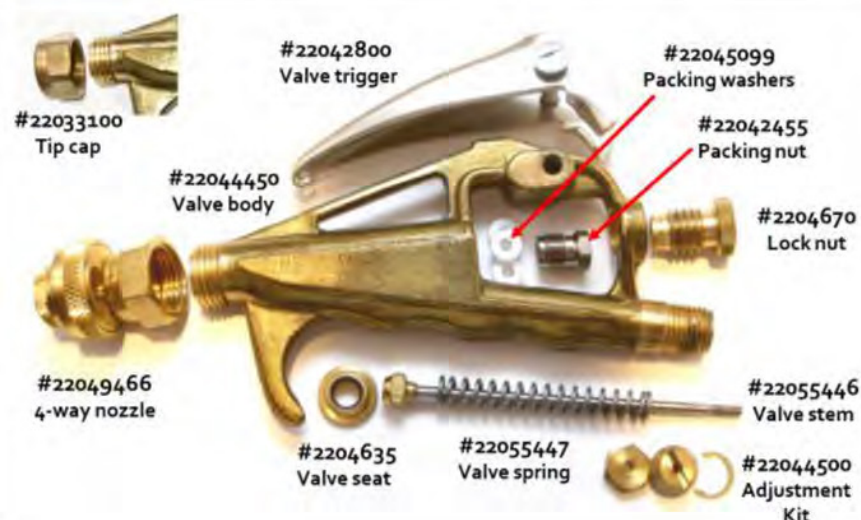

ACCUSPRAY STANDARD



ACCUSPRAY

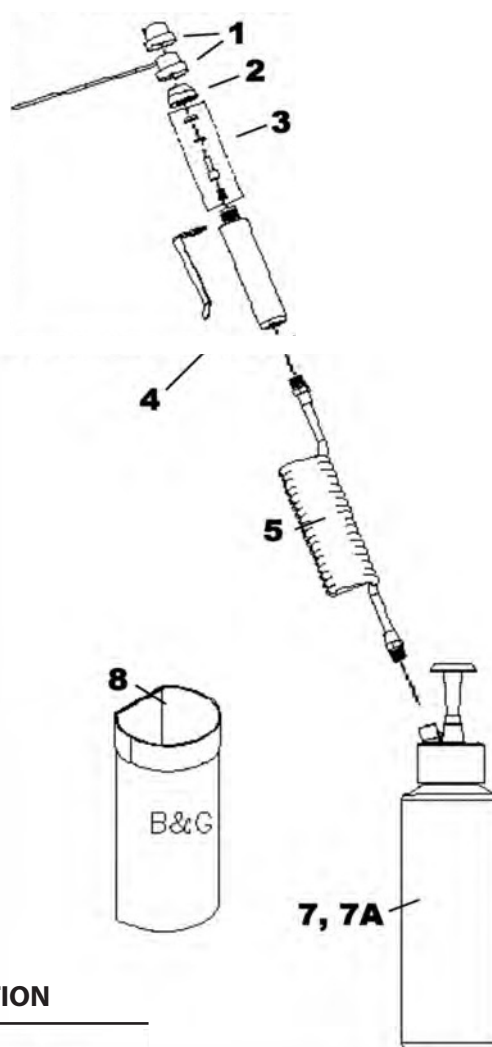

ITEM	PART NUMBER	DESCRIPTION
1	24000031	Tip Kit
2	22000015	Handle cap
3	24000062	Valve Repair Kit
4	24000029	Complete valve
5	24000028	Hose S/A, Blue
5A	24000078	Hose S/A, Elite
6	24040093	Brass pump assmby
6A	24040083	Plastic pump assmbly
7	24000000	Plastic bottle
7A	2400225	Stainless steel bottle
8	24000073	Holster
8A	24000072	Holster, Elite

SPOT SPRAYR

Bottle pressurized
with 10 strokes



#24000107

SpotSprayR Repair Kit




AEROSOL DELIVERY UNIT



#24000050

ADU Repair Kit

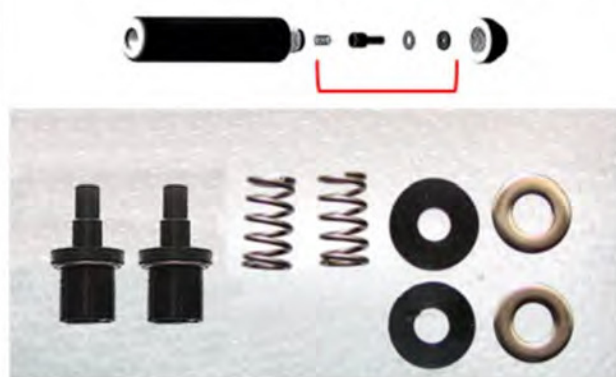

#24000061

ADU Repair



PORTABLE AEROSOL DELIVERY SYSTEM CART MODEL



Portable Aerosol System - Cart

#	Order #	Description
1	16400118	Valve assembly, 18" Exten.
2	16401643	Coiled hose, 15 ft.
3	16400127	Aerator assembly
	16400128	O-ring
4	16400129	Nozzle
5	22058800	Gauge assembly
6	16289999	Compressor, 110V
7	22070620	Handle assembly




#16400130
Hose Repair Kit



#16401643



WOOD TREATMENT SYSTEM

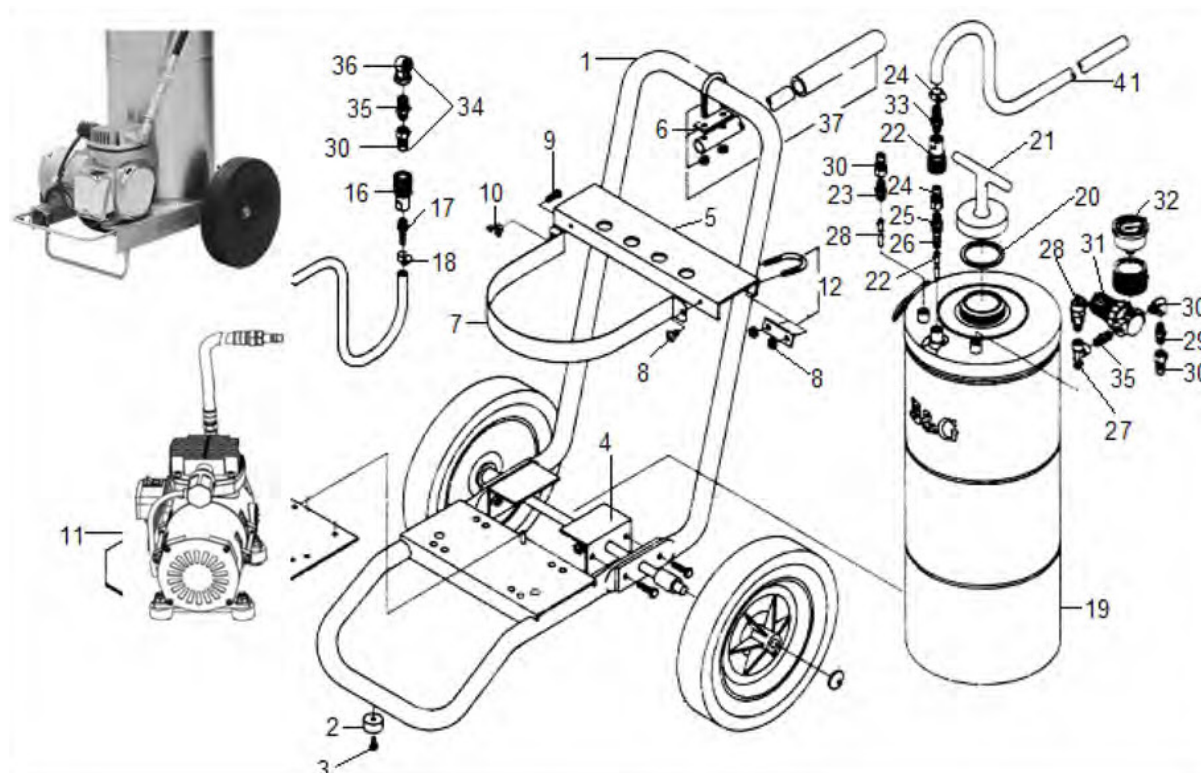


Wood Treatment System

#	Order #	Description	#	Order #	Description
1	24040060	Cart assembly	23	24040057	Adapter, foam siphon
2	24040100	Bumper	24	22071801	Plug, quick connect
3	24040101	Screw, #10	25	24040057	Adapter, foam siphon
4	24040062	Bracket, tank	26	24040093	O-ring
5	24040061	Rail, cart	27	24040078	Tee, street 1/8 NPT
6	24040063	U bolt	28	24040085	Valve, pressure relief
7	22071743	Band, tank	29	22026700	Nipple, hex 1/8 NPT
8	22071751	Screw, Phillips	30	22070850	Elbow, street 1/8 NPT
9	24040080	Screw, Phillips	31	22025300	Adapter, liquid siphon
10	24040084	Wing nut	32	22070724	Gauge, liquid filled
11	24040061	Rail, cart	33	22071803	Fitting, 3/8 hose NPT
12	24040081	Screw, Phillips	34	24040093	O-ring
13	24040082	Washer, fender	35	22071266	Nipple, reducing
14	22071752	Nut, hex	36	24040088	Air chuck, quick connect
15	24040065	Compressor, hose	37	24040102	Handle, grip, U-bolt
16	22071802	Socket, quick connect			
17	24040079	Fitting, hose 1/8 NPT			
18	33000467	Clamp, hose			
19	24040051	Tank			
20	22028000	Seal, tank			
21	22070600	Cap + handle assb			
22	22025901	Siphon tube			


See also page 62

WOOD TREATMENT SYSTEM

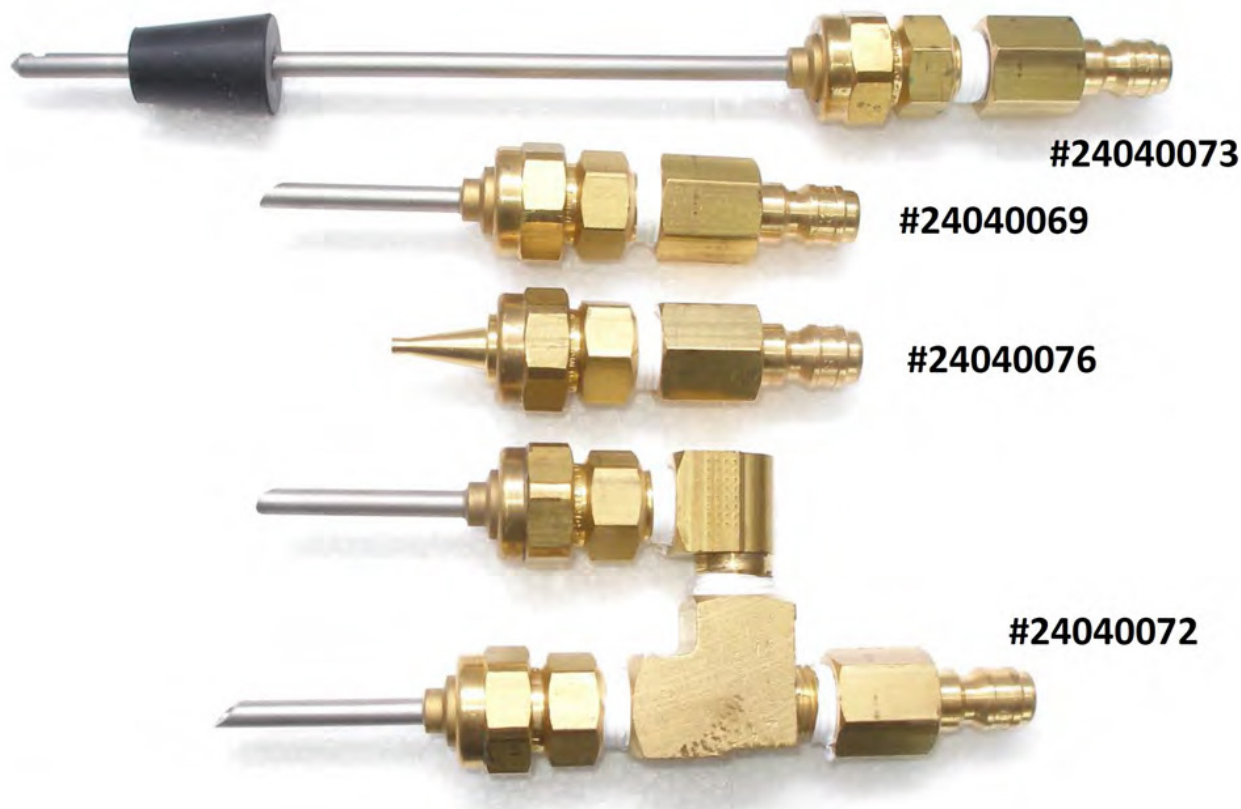

Compressor Repair Kit

- #1 – 22071266 - Reducer
- #2 – 22026600 - Tee
- #3 – 95127041 - Nipple
- #4 – 95127043 - Coupling
- #5 – 24040106 - Check valve
- #6 – 22071829 - Coupler
- #7 – 22070811 - Plug
- #8 – 22030400 - Washer
- #9 – 22030217 - Hose
- #10 – 22070850 - Elbow
- #11 – 95127047 - Cylinder

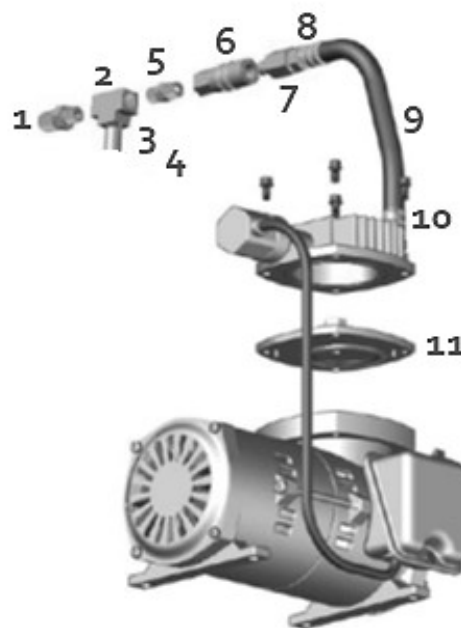

#16400110
Repair Kit

WOOD TREATMENT SYSTEM TROUBLESHOOT

P. Tank not getting pressure.

S. Compressor not operating properly.
The regulator may not be adjusted properly, pull knob out, then turn to the right increase pressure.

P. Tank does not hold pressure.

S. Tighten cap; check the tank gasket and replace if cracked or worn.

Check all quick-connect plugs for proper fitting and an air leak.

P. Gun sprays only air, no liquid or foam.

S. Check tank to be certain there is sufficient liquid in tank.

Check siphon tube for cracks, replace if damaged.



P. Compressor will not start.

S. Check gauge, there may be too much pressure in tank, pull the release valve to reduce pressure.


P. Leaking occurs around the hose fitting or around the tip fitting.

S. Tighten the hose fitting to the gun, tighten the hose clamp.


Replace the seat gasket, be certain to install the gasket with the narrow end toward the gun.

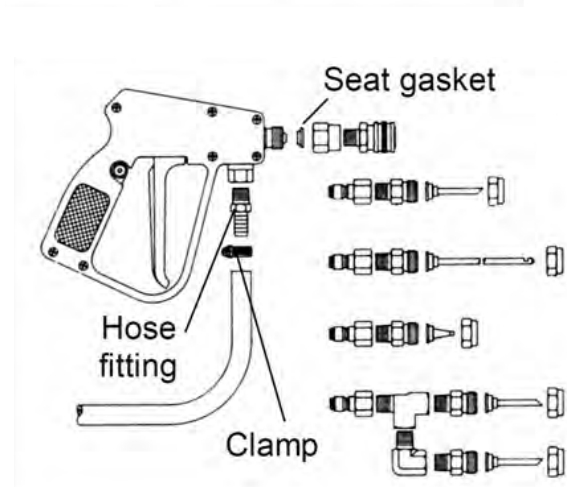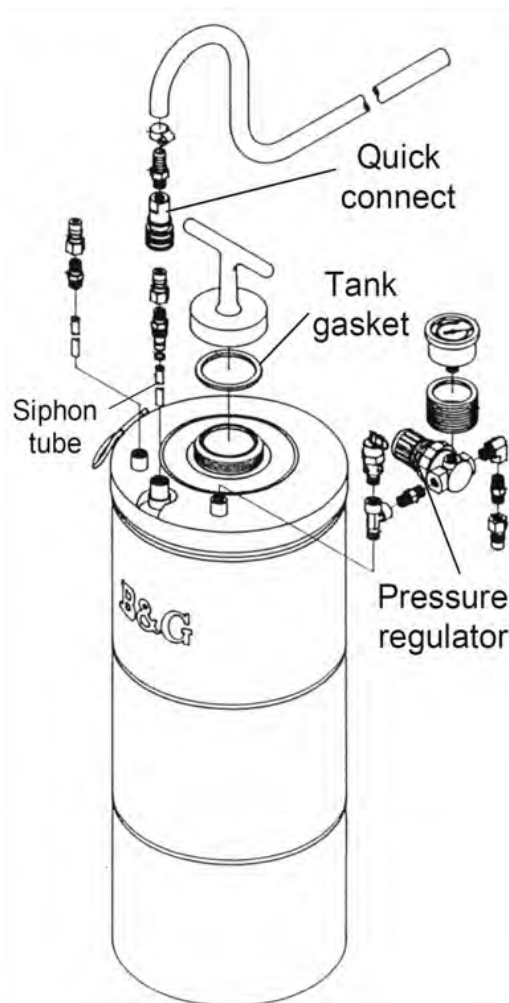

WOOD TREATMENT SYSTEM PRESSURE REGULATOR PARTS

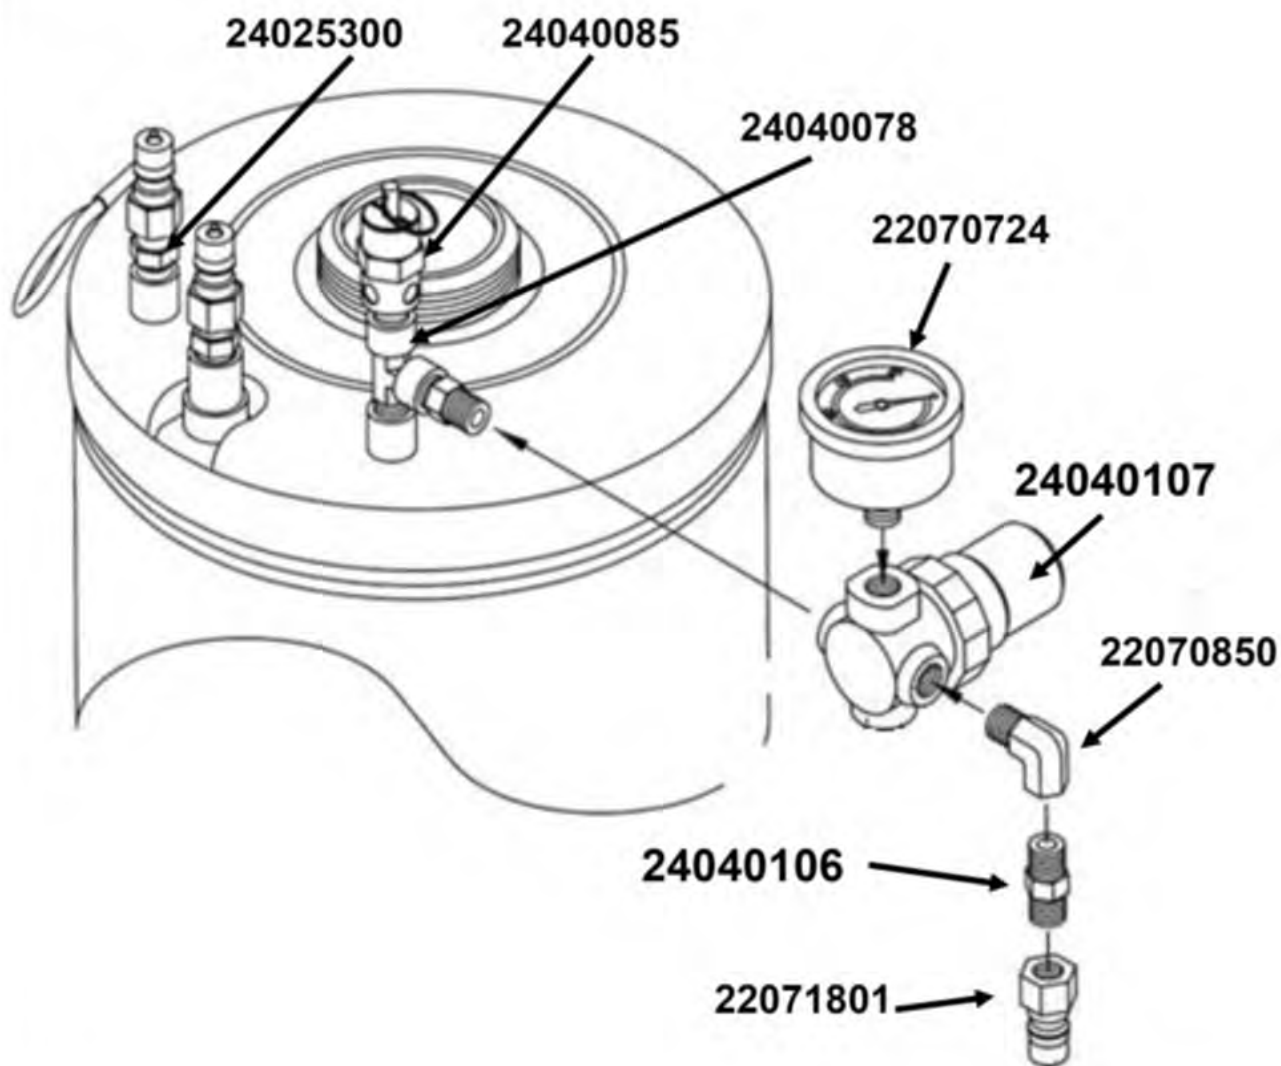

2600 FLEX-A-LITE

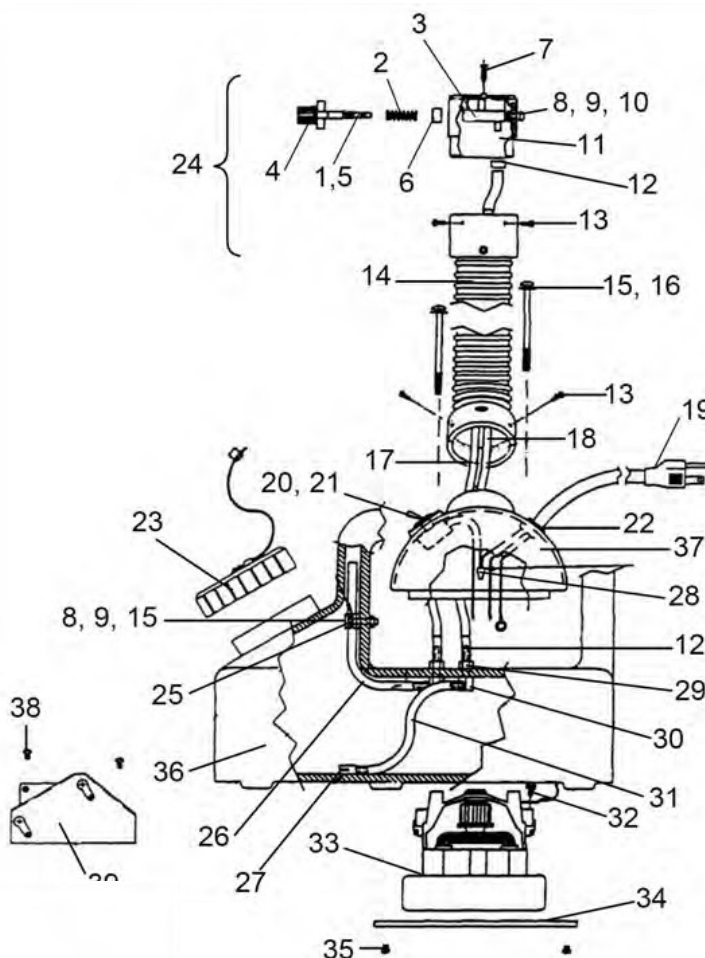

Flex-a-Lite Fogger

#	Part	Description
1	2332	Clip
2	2334	Spring
3	2346	Venturi
4	2331	Knob asmbly
5	2330	O-Ring
6	2333	Sleeve
7	2329	Screw
8	2352	Screw
9	2357	Hex nut
10	2359	Spacer
11	2353	Nozzle
12	1433	Spring clamp
13	2354	Screw
14	2385	Hose asmbly
15	2326	Flat washer
16	2306	Screw
17	2349	Pressure tube
18	2374	Supply tube
19	2314	Electric cord
20	2311	Switch
21	990	Switch boot
22	2315	Strain relief
23	2386	Cap and O-ring
24	2384	Nozzle assembly
25	2358	Tube retainer
26	2319	Pressure tube
27	2312	Strainer
28	2316	Wire connector
29	1241	Tank barb
30	1246	Angle barb
31	2375	Supply tube
32	2327	Ground screw
33	2323	Motor 110V
34	2324	Motor 220V
35	2305	Motor guard
36	2306	Screw
37	2406	Tank
38	2408	Housing
39	1145	Screw
	2355	Mount plate

**New motor mounting
bracket: #95122821**

**Dome gasket:
#29103291**


2300, 2400 FOGGERS

**New motor mounting
bracket: #95122821**

Dome gasket: #29103291

2300, 2400 Fogger


#	Part	Description
1	2386	Cap and O-Ring
2	2407	Housing
3	990	Switch boot
4	2311	Switch 110V
	2340	Switch 220V
5	2336	Ring
6	2329	Screw
7	2346	Venturi
8	2326	Flat washer
9	2308	Screw
10	2315	Strain relief
11	2314	Electric cord 110V
	2341	Electric cord 220V
12	2330	O-ring (Model 2400)
12	2337	Plug (Model 2300)
13	2331	Valve rod, knob (2400)
14	2332	Clip (Model 2400)
15	2334	Spring (2400)
16	2333	Sleeve (2400)
17	2316	Wire connector
18	2418	Spring
19	1246	Angle barb
20	2327	Grounding screw
21	2323	Motor 110V
	2324	Motor 220V
22	2305	Motor guard
23	2306	Screw
24	2375	Supply tube, lower
25	2312	Strainer
26	1241	Tank barb
27	2401	Supply tube, upper
28	2404	Tank

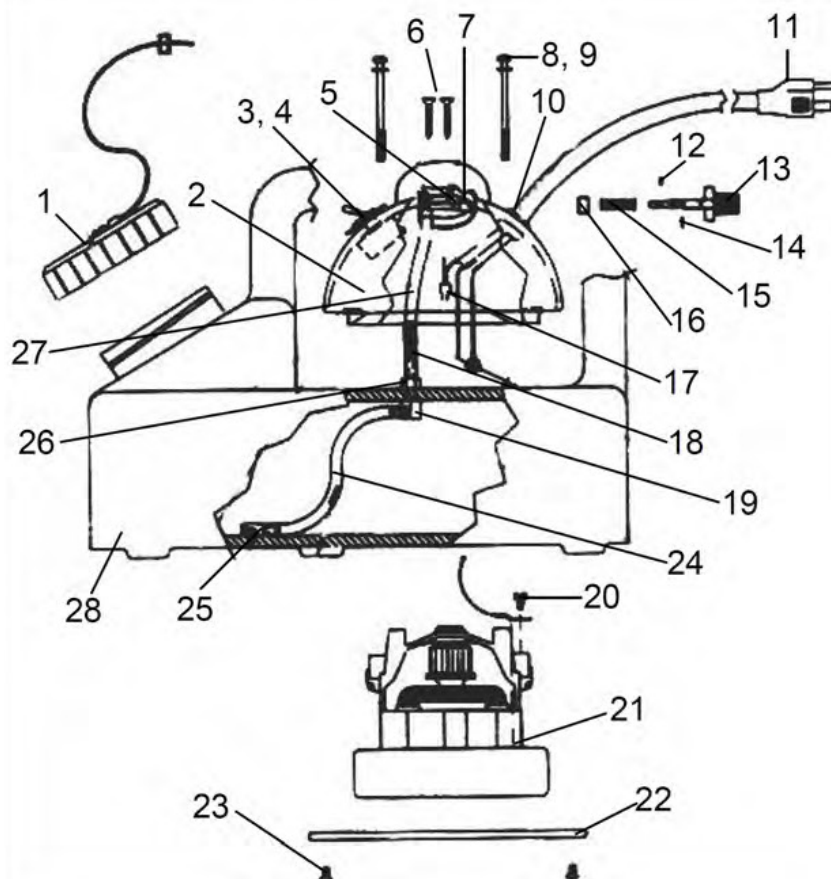

HURRICANE FOGGERS



Hurricane ES

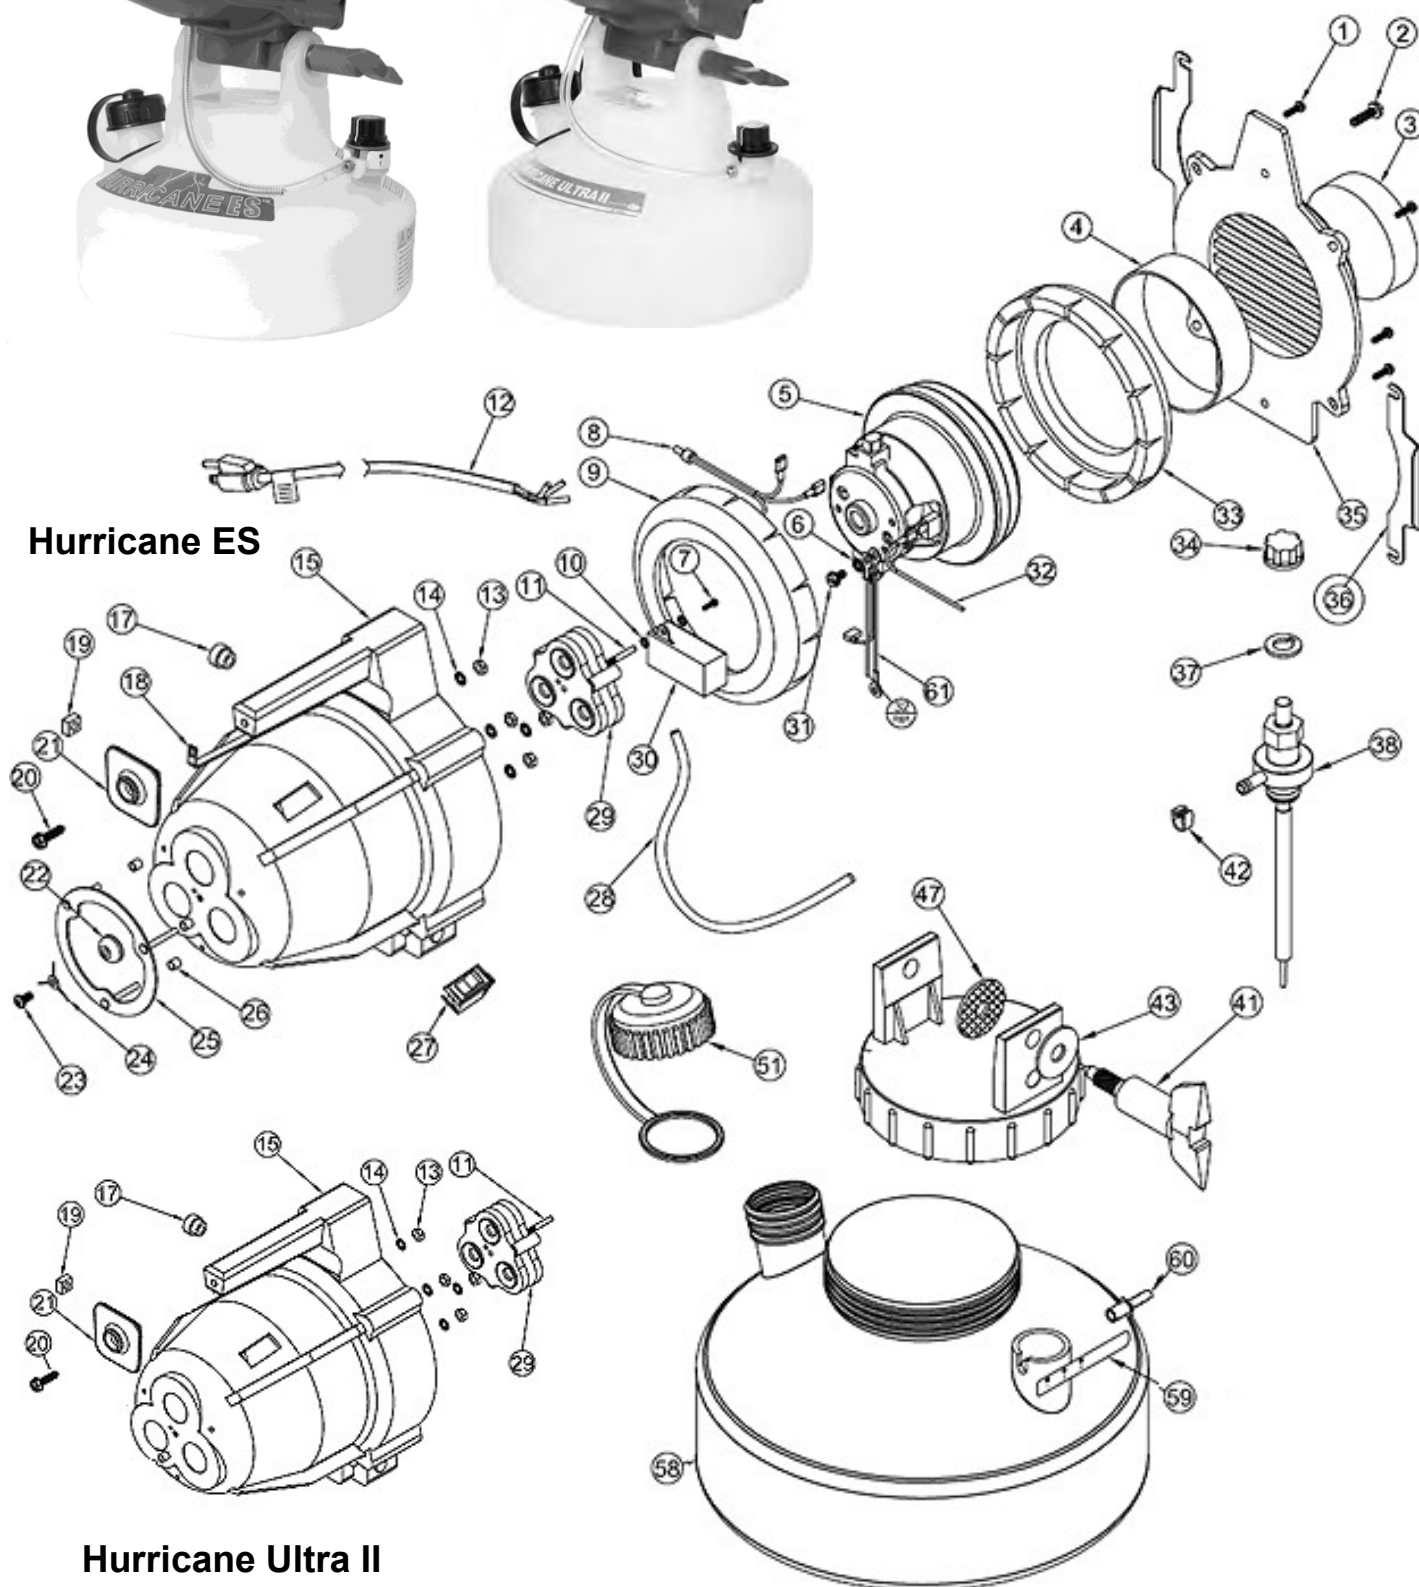


Hurricane Ultra II

PARTS FOR HURRICANE ES AND HURRICANE ULTRA II

ITEM	QTY	PART NUMBER	ITEM DESCRIPTION
1	5	62161	SCREW, 10 X ¾ HIGH-LOW THR.
2	1	62160	SCREW, 10-16 X 1.25 SHWH.
3	1	62124	FILTER, AIR 3.875 DIA.
4	1	95122823	SPACER, PVC, MOTOR
5	1	95122820	MOTOR, BLOWER AY.120V
		95122824	MOTOR, BLOWER AY., 240V
6	1	138530	WASHER, LOCK, #8, STAINLESS STEEL
7	1	65228	SCREW, 6-32 X 1/2, STAINLESS STEEL
8	1	62189-1	WIRE AY., BLACK
9	1	62366	GASKET, FOAM, DIE CUT (.187 THK.)
10	1	138527	WASHER, LOCK, #6, STAINLESS STEEL
11	1	62187	STANDOFF, POWER SUPPLY, ES
12	1	62189-3	WIRE AY., GREEN
13	4	25166	10-24 NUT, STAINLESS STEEL
14	4	65250	WASHER, LOCK, #10, STAINLESS STEEL
15	1	62148	HOUSING (MACHINED)
17	1	29108157	STRAIN RELIEF (110V)
	1	29108157	STRAIN RELIEF (220V)
18	1	62143	GROUND STRIP
19	1	62367	NUT, 3/8 – 16 SQUARE
20	1	62053-1	HAND STOP, SLOTTED
21	1	62162	SCREW 10-12 X ¾ SHWH
22	1	62186	BUTTON, ELECTRODE SUPPORT
23	1	62441	SCREW, #10-3/4", BUTTON
24	1	62172	ELECTRODE, 3-PRONG
25	1	62170	RING/STUD AY.
26	3	62171	SPACER, NYLON, .196 ID X .312 OD X .25 LONG
27	1	86819-1	SWITCH, LIT ROCK, 110V
	1	86819-2	SWITCH, LIT ROCK, 220V
28	1	62227-3	TUBE, 3/16 ID. X 5/16 OD.
29	1	62045-54-1	NOZZLE AY
30	1	62173-3	POWER SUPPLY, 110V
	1	62173-3	POWER SUPPLY, 220V
31	1	9425089	SCREW, #8-32 X 3/8, HEX, SLOTTED

PARTS FOR HURRICANE ES AND HURRICANE ULTRA II

32	1	62189-2	WIRE AY., POWER, WHITE, 110V
	1	62189-4	WIRE AY., POWER, WHITE, 220V
33	1	95122822	GASKET, FOAM, DIE CUT (.375 THK.)
34	1	62211	KNOB AY., FORMULATION
35	1	62002-54	HOUSING CLOSURE
36	2	62233	BRACKET, SUPPORT, REAR HOUSING
37	1	62139	WASHER, KNOB
38	1	62195-2	VALVE AY., STAINLESS STEEL
39	1	62197	LABEL, WARNING, ELECTRIC SHOCK
41	1	62010-54	LOCKING HANDLE
42	1	21158-1	CLAMP, 5/16, PLASTIC
43	1	62128	WASHER, LOCKING HANDLE
47	1	62083	WASHER, FRICTION
51	1	62135-1	CAP AY., TANK
55	1	62497	WRENCH, ALLEN, 5/64
58	1	95122915	TANK, HURRICANE ES (MACHINED)
59	1	62198	LABEL, FLOW RATE INDICATOR
61	1	62189-3	WIRE AY., GREEN

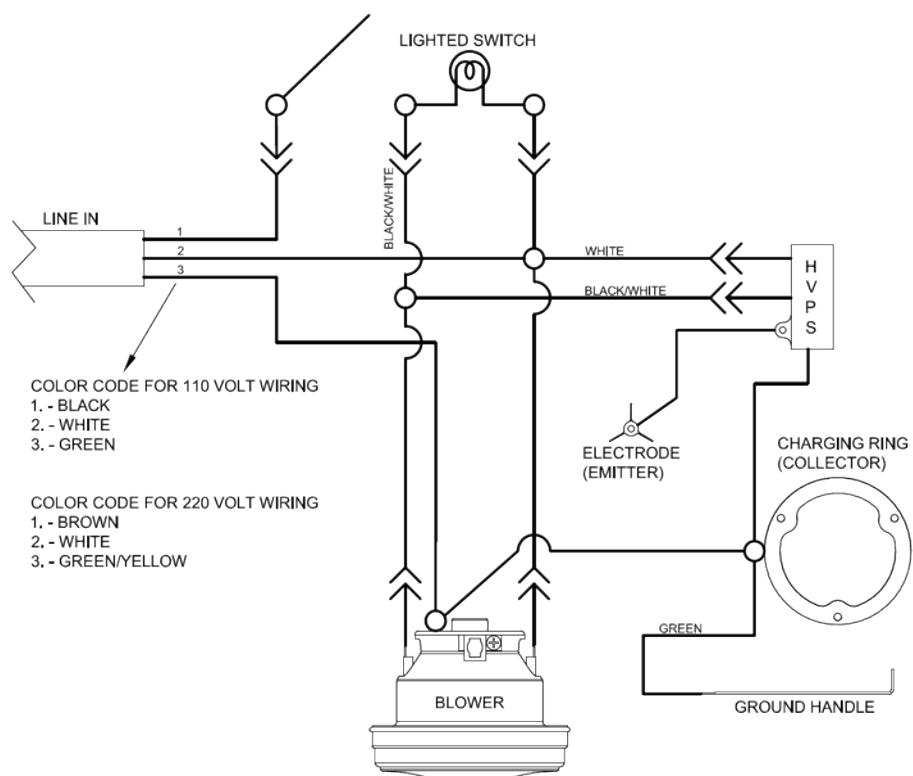

VERSA-FOGGER

Replacement Parts



REPLACEMENT PARTS


1	Hose assembly	Order # 39672-3
2	Nozzle Assembly	Order # 39867-1
3	Formulation Tank + cap	Order # 39791-5
4	Blower motor	Order # 39651
5	Blower Motor Belt (not shown)	Order # 39504
6	Harness Assembly (not shown)	Order # 39625
7	Nozzle Handle (not shown)	Order # 62200
8	Formulation Tank Cap + gasket	Order # 39791-4 Gasket # 22232

Spray Droplets

10% of droplets
15 μm or smaller

45% of droplets
32.6 μm or smaller

$Dv10 = 15.88 \pm 0.14 \mu\text{m}$ $Dv50 = 32.65 \pm 0.92 \mu\text{m}$
Relative Span = 1.13 %LessSum = 100.00

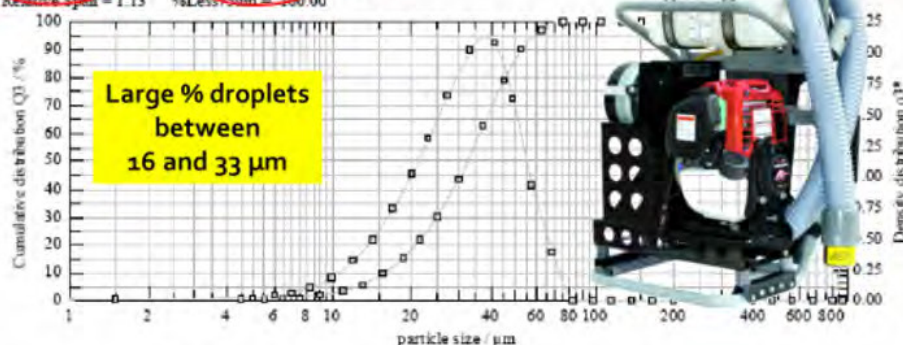

USDA – Agriculture Research Service Calibration

SERIES 400 TERMITE KITS


ROBCO QCG | SRG GUN

B&G

ROBCO QCG



Description	Legacy Part #	Order #
Robco Gun	22067700	1103002837
Robco 5-in-1 Kit 425 w/ tip shut-off	11007425	1103002814
Repair Kit: Includes 1 each of Items #11, 16, 17, 25	22067748	11030002841
Soil rodding tool with 40" rod and 454 5/8" soil rodding 360° 2 gpm tip	22067703	1103002839

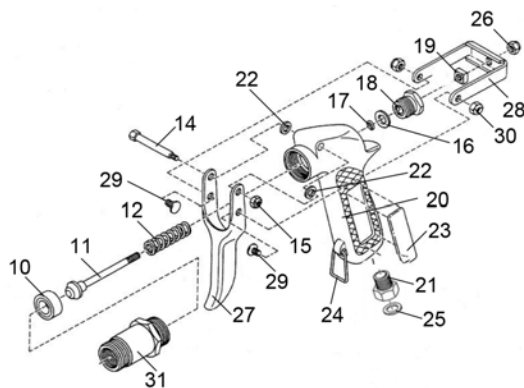


Parts

#	Description	Legacy Part #	Order #
10	Valve seat 34510	22067728	1603000114
11	Shutoff valve 34511	22067710	1603000100
12	Shutoff spring 34512	22067711	1603000101
14	Pivot bolt 34514	22067712	1203000116
15	Pivot bolt nut 34515-N	22067713	1603000102
16	Gasket 34516-V	22067714	1603000103
17	O-ring 34517-V	22067715	1603000104
18	Gland nut 34518	22067716	1603000105
19	Valve stem nut 34519-S	22067717	1603000106
20	Handle 34520	22067718	1603000107
21	Adapter 34521	22067729	1603000115
22	Pivot bolt washer 34522	22067720	1603000109
23	Label 34590-Q	22067731	1603000117
24	Trigger lock 34596	22067721	1603000110
25	Gasket HWN	22067536	1603000097
26	Lock nut, valve stem 34519-N	22067722	1603000111
27	Trigger piece 34513-A	22067724	1203000118
28	Valve yolk 34513-B	22067725	1203000119
29	Trigger hinge bolt 34513-C	22067726	1603000112
30	Hinge bolt nut 34513-D	22067727	1603000113
31	Adapter 34563	22067737	1603000121
N/S	Cone jet assembly 34606-6	22067749	1103002842
N/S	Cone jet assembly 34606-12	22067875	1103002847
N/S	Trigger assembly 34513	22067723	1203000117

SRG GUN



Description	Legacy Part #	Order #
SRG-6 Gun Model (6 gal/min)	22067701	1103002838
SRG-12 Gun Model (12 gal/min)	22067897	1103002848
Repair Kit: Includes 1 each of Items #3, 6, 7, 16, 17, 25	22067848	1103002844

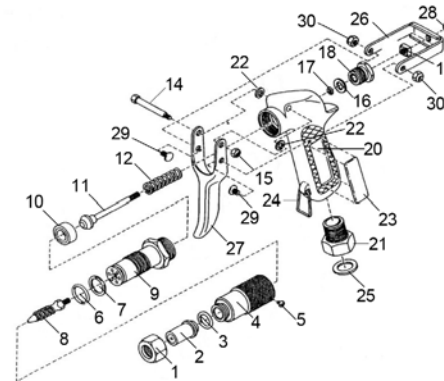

Parts

#	Description	Legacy Part #	Order #
1	Nozzle nut 34501	22067738	1203000120
2	Nozzle orifice 34502-6	22067739	1203000121
2	Nozzle orifice 34502-12	22067838	1203000148
3	O-ring P-14 34503-V	22067740	1603000122
4	Adj. sleeve 34504	22067741	1603000344
5	Sleeve screw 4505	22067742	1603000123
6	O-ring P-18 34506-V	22067743	1603000124
7	Back-up o-ring 34507	22067744	1603000125
8	Pattern valve 34508	22067745	1603000126
9	Valve body 34509	22067746	1603000335
10	Valve seat 34510	22067728	1603000114
11	Shutoff valve 34511	22067710	1603000100
12	Shutoff spring 34512	22067711	1603000101
13	Trigger Assembly 34513	22067723	1203000117
14	Pivot bolt 34514	22067712	1203000116
15	Pivot bolt nut 34515-N	22067713	1603000102
16	Gasket 34516-V	22067714	1603000103
17	O-ring 34517-V	22067715	1603000104
18	Gland nut 34518	22067716	1603000105
19	Valve stem nut 34519-S	22067717	1603000106
20	Handle 34520	22067718	1603000107
21	Adapter 34521	22067729	1603000115
22	Pivot bolt washer 34522	22067720	1603000109
23	Label 34590-Q	22067731	1603000117
24	Trigger lock 34596	22067721	1603000110
25	Gasket HWN	22067536	1603000097
26	Lock nut, valve stem 34519-N	22067722	1603000111
27	Trigger piece 34513-A	22067724	1203000118
28	Valve yolk 34513-B	22067725	1203000119
29	Trigger hinge bolt 34513-C	22067726	1603000112
30	Hinge bolt nut 34513-D	22067727	1603000113
27-30	Trigger assembly	22067723	1203000117

SERIES 400 TERMITE KITS


Versatool | Versagun Valve

B&G

VERSATOOL VALVE 400 SERIES



Description	Legacy Part #	Order #
Made in 2005 or Later		
Versatool Valve only	11007407	1203000081
Versatool Kit 415 w/ tip shut-off	11007415	1103002812
Repair Kit: Includes 1 each of Items #6, 8, 14, 5, 9 and 2 each of #3	22028910	1103002835
Made in 2005 or Earlier		
Versatool Valve only (pre-2005)	22071649	1603000061

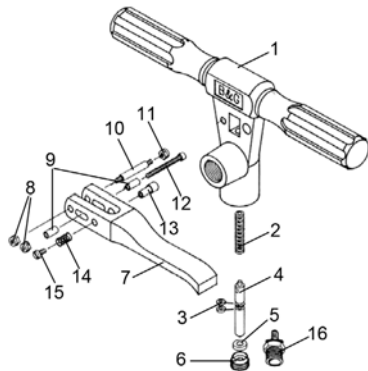


Parts (Made in 2005-present)

#	Description	Legacy Part #	Order #
1	Valve body	22071644	1203000209
2	Spring rod	22059700	1603000071
3	O-ring	33000090	1608004070
4	Valve rod	22059800	1603000073
5	Seat gasket	22060000	1603000075
6	Seat gasket holder	22060100	1203000096
7	Valve trigger	22059000	1203000095
8	Hex nut	22040500	1608003709
9	Spacer	22071038	1603000141
10	Trigger pin	22058800	1203000093
11	Hex nut	22040500	1608003709
12	Rod screw	22059100	1603000065
13	Trigger lock	22059400	1603000068
14	Trigger lock spring	22059500	1603000069
15	Trigger lock screw	22059600	1603000070
16	Adapter	22067518	1603000334
17	Threaded washer	95144402	1608004386

VERSAGUN VALVE 400 SERIES



Description	Legacy Part #	Order #
Versagun Valve only	11007406	1203000080
Versagun Kit 435 w/ tip shut-off	11007435	1103002817

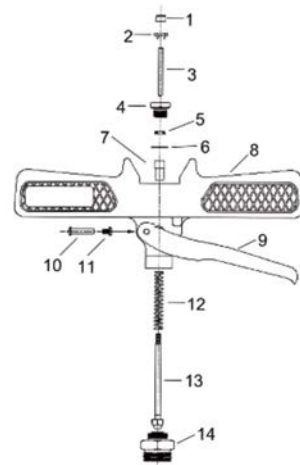

Parts (made in 2010 or later)

#	Description	Legacy Part #	Order #
1	#10-24 hex nut	29103309	1608004009
2	Actuator block	22067513	1603000091
3	Actuator pin	22067512	1603000090
4	Packing screw	22067511	1603000089
5	U-cup seal	22067510	1603000088
6	Viton seal	22067508	1603000086
7	Spring spacer	22067509	1603000087
8	Valve body	22067575	1603000099
9	Valve trigger	22067515	1603000092
10	Screw housing	22043200	1208004903
11	Trigger screw	22043000	1208004906
12	Compression spring	22055447	1608003845
13	Shut-off assembly	22067522	1603000094
14	Soft-seat adapter	22067521	1203000114

SERIES 400 TERMITE KITS

Tips | Rodding Pipes | Cone Seals

B&G

TIPS



Description	Legacy Part #	Order #
Standard tip kit, all 2 gpm listed below	22067997	1203000166

Parts


#	Description	Legacy Part #	Order #
1	451 7/16" 360° 2 gpm	11007451	1203000083
2	453 7/16" 180° 2 gpm	11007453	1203000085
3	454 5/8" Soil rodding 360° 2 gpm	11007454	1603000031
4	457 7/16" Void 2gpm	11007457	1203000086

Optional Termite Tips (all 1 gpm)

Description	Legacy Part #	Order #
452 7/16" 180° 1 gpm	11007452	1203000084

RODDING PIPES

RODDING PIPES (INCLUDED IN 400 SERIES KITS)

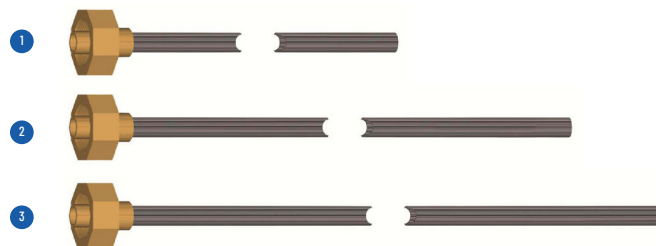

Parts

#	Description	Legacy Part #	Order #
1	12" x 7/16"	22071427	1203000195
2	40" x 7/16"	22071428	1203000196
3	40" x 5/8"	22071429	1203000197

EXTENDA PIPES




Parts

#	Description	Legacy Part #	Order #
1	465 40" x 5/8"	11007465	1103002819
2	460 40" x 7/16"	11007460	1103002818

ADJUSTABLE CONE SEALS

ADJUSTABLE CONE SEAL 7/16" OR 1/2"

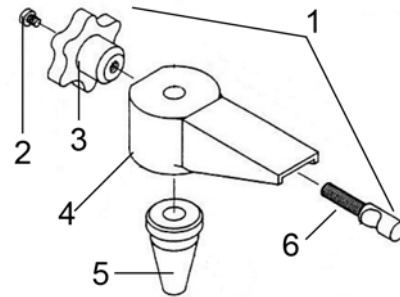

Parts

#	Description	Legacy Part #	Order #
1	Adjustable Cone Seal 7/16"	22071716	1203000220
	Adjustable Cone Seal 1/2"	22071775	1203000222
2	Retaining Screw 1145	22071045	1603003880
3	Lock Knob 1380	22071380	1203000178
4	Foot Ram ACS30	22071776	1603000156
5	Cone Seal 7/16"	22071715	1603000150
	Cone Seal 1/2"	22071715	1603000150
6	Lock Bolt 1381	22071381	1603000144

SLAB INJECTORS

SSI-4 | SSI-14


B&G

SLAB INJECTORS

SUB-SLAB INJECTORS (SSI-4 AND SSI-14)



Description	Legacy Part #	Order #
SSI-4 with 18" x 1/2" rod	11005965	1103002808
SSI-14 with 28" x 1/2" rod	11005985	1103002809

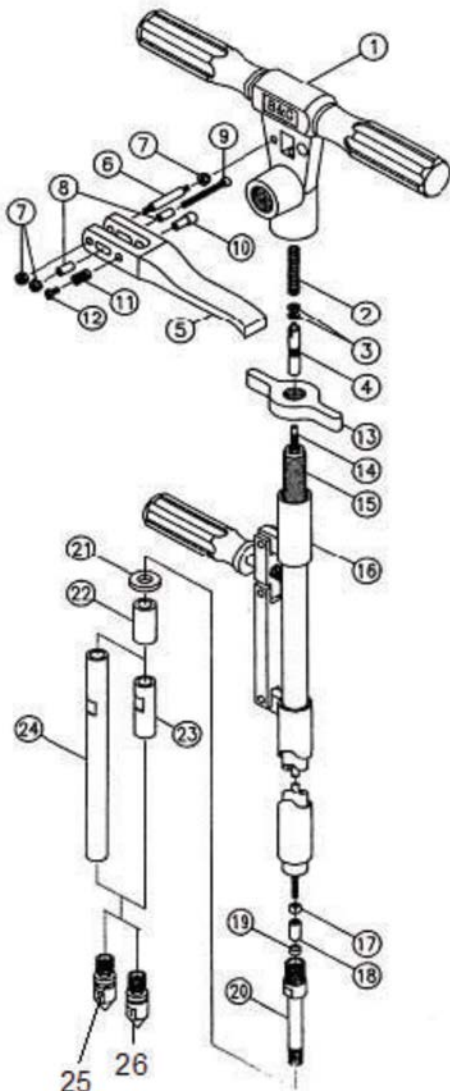

Parts

#	Description	Legacy Part #	Order #
1	Valve assembly VT-610	22058900	120300094
2	Rod spring VT-618	22059700	160300071
3	O-ring 1-1964	33000090	1608004070
4	Valve rod 2673	22071973	1203000237
5	Valve trigger VT-611	22059000	1203000095
6	Trigger pin VT-609	22058800	1203000093
7	Hex nut TN-45	22040500	1608003709
8	Spacer 1138	22071038	1603000141
9	Rod screw VT-612	22059100	1603000065
10	Trigger lock VT-615	22059400	1603000068
11	Trigger spring VT-616	22059500	1603000069
12	Trigger screw VT-617	22059600	1603000070
13	Wing nut	22065300	1203000100
14	Extension rod for SSI-4 2674	22071974	1203000238
14	Extension rod for SSI-14 2675	22071975	1203000239
15	Shaft for SSI-4 2668	22071968	1203000235
15	Shaft for SSI-14 2669	22071969	1203000236
16	Lock sleeve for SSI-4 400	22065400	1203000101
16	Lock sleeve for SSI-14 500	22065500	1203000108
17	Seat stem lock nut SSL-157	22045900	1208001197
18	Seat stem 2676	22071976	1203000240
19	Seat gasket 2677	22071977	1203000241
20	Stud 2678	22071978	1203000242
21	Compression ring #5	22065600	1603000079
22	Expansion ring gasket #6	22065800	1603000080
23	Tip adapter 1370	22071370	1203000176
24	6" extension LDT-36	22066136	1203000111
25	360°, 2 gpm tip 1390	22071390	1603000145
26	180°, 2 gpm tip 1542	22071642	1203000207


SLAB INJECTORS

Versatool Slab Injector 484

B&G

VERSATOOL SLAB INJECTOR 484

Description	Legacy Part #	Order #
Versatool Slab Injector 484	11007375	1103002810
Repair Kit: Includes 1 each of Items #4, 6, 7, 10, 11, 14	22028910	1103002835

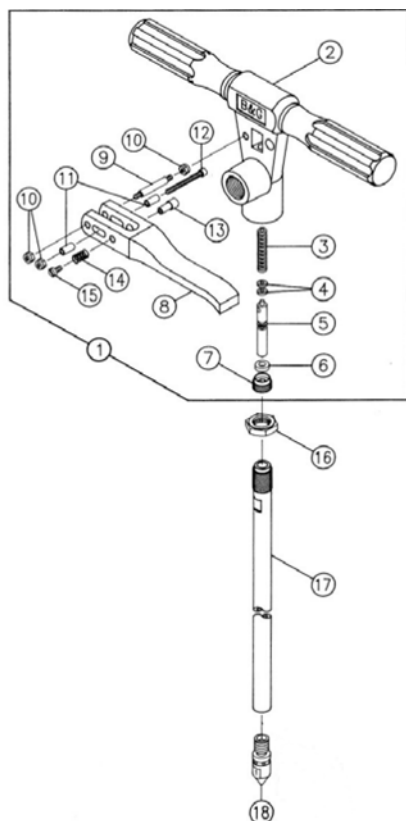

Parts

#	Description	Legacy Part #	Order #
1	1549 Valve assembly	22071649	1203000210
2	1544 Valve body	22071644	1203000209
3	VT-618 Spring rod	22059700	1603000071
4	1-1964 O-ring	33000090	1608004070
5	VT-619 Valve rod	22059800	1603000073
6	VT-621A Seat gasket	22060000	1603000075
7	VT-622A Seat gasket holder	22060100	1203000096
8	VT-611 Valve trigger	22059000	1203000095
9	VT-609 Trigger pin	22058800	1203000093
10	TN-45 Hex nut	22040500	1608003709
11	1138 Spacer	22071038	1603000141
12	VT-612 Rod screw	22059100	1603000065
13	VT-615 Trigger lock	22059400	1603000068
14	VT-616 Trigger lock spring	22059500	1603000069
15	VT-617 Trigger lock screw	22059600	1603000070
16	Adapter	22070917	1203000170
17	1340 Pipe assembly (40")	22071940	1203000231
18	1390 Tip (360 degree, 2 gpm)	22071390	1603000145
18	1542 Tip (180 degree, 2 gpm)	22071642	1203000207
N/S	Check valve assembly (fits between parts 17 and 18)	22071950	1203000232
N/S	Adjustable Cone Seal	22071716	1203000220

TM-1 TERMITE MONITOR




Description	Legacy Part #	Order #
Custom private label printed in white ink (2688 stations/pallet)	26000102	1101002282
Unprinted	26000100	1101002281
90 pack replacement stakes	26000013	1101002280
100 pack replacement cardboard inserts	26000009	1101002278

TREBOR PLUGS



Description	Legacy Part #	Order #
3/8" seal (2500/case)	45000375	1103002862
1/2" seal (2500/case)	45000500	1103002863
9/16" seal (2500/case)	45000562	1103002864

MINI DUST-R

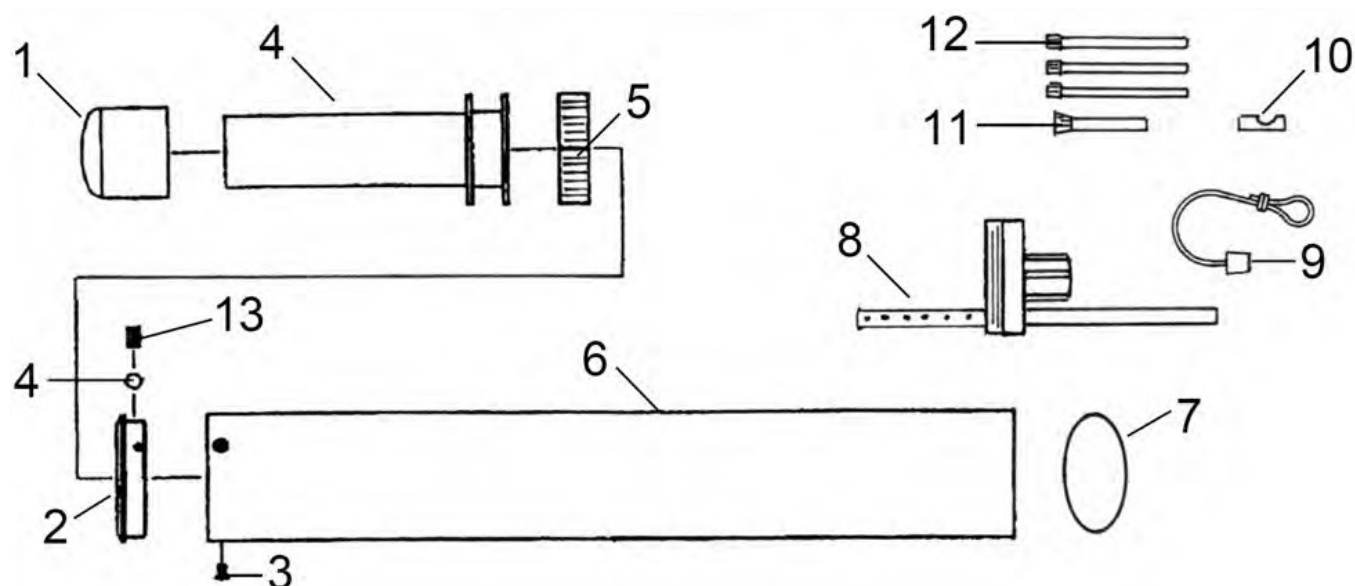


Model - 1151-M Mini-Dust-R

#	Part	Description
1	MDR-1	Cap
2	MDR-2	Collar
3	1174	Screw, flat head #6
4	MDR-4	Plunger
5	DR-020	Pump gland
6	MDR-7	Barrel
7	MDR-8	Barrel seal
8	MDR-9	Closure
9	MDR-10	Stopper assembly
10	MDR-11	Tip, offset fan
11	MDR-12	Tip, straw
12	MDR-13	Extensions (3)
13	VT-616	Spring
14	MDR-15	Ball



#11005850

HAND DUST-R

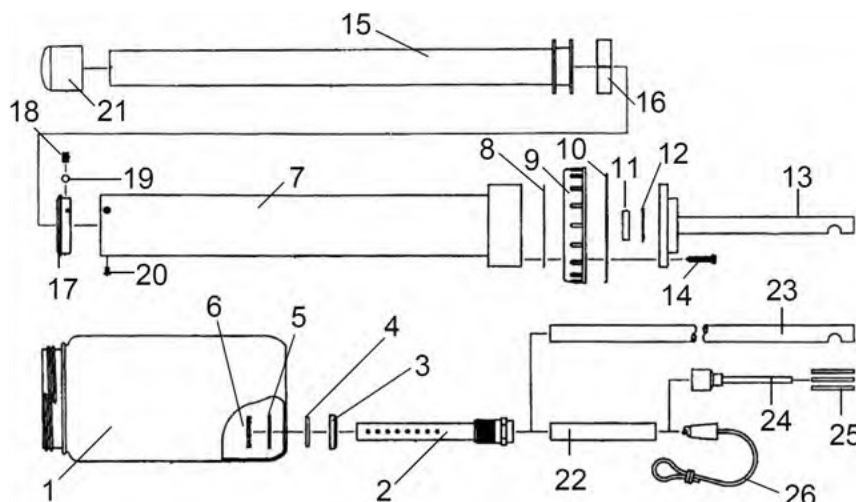

1152- A Hand Dust-R

#	Part	Description
1	DR-003	Bottle
2	DR-027	Siphon
3	DR-025	Ring
4	2273	O-Ring
5	DR-029	Washer
6	DR-028	Locknut
7	DR-012	Barrel
8	DR-010	Seal, barrel
9	DR-009	Bottle cap
10	DR-006	Bottle seal
11	DR-008	Valve
12	DR-007	Valve plate
13	DR-005	Valve cap
14	1224	Screw, hex
15	MDR-4A	Plunger
16	DR-020	Pump gland
17	MDR-2	Collar
18	MDR-15	Ball
19	VT-616	Spring
20	1174	Screw, flat head
21	MDR-1	Cap
22	DR-002	Short extension
23	DR-011	Long extension
24	041	Tip, pencil
25	042	Tip, straw
26	DR-001	Stopper assbly
27	24050010	Stopper assbly
28	24050016	Extension clip
29	24050008	Granular outlet
30	24050012	Granular extension
31	24050011	Extension
32	24050014	Extension Velcro
33	24050015	Barrel Velcro




#11005800

LONG-REACH GRANULAR DUST-R


Long-Reach Granular Dust-R

#	Part	Description
1A	24050001	Bottle
2	DR-027	Siphon
3	DR-025	Ring
4	2273	O-Ring
5	DR-029	Washer
6	DR-028	Locknut
7	DR-012	Barrel
8	DR-010	Seal, barrel
9	DR-009	Bottle cap
10	DR-006	Bottle seal
11	DR-008	Valve
12	DR-007	Valve plate
13	DR-005	Valve cap
14	1224	Screw, hex
15	MDR-4A	Plunger
16	DR-020	Pump gland
17	MDR-2	Collar
18	MDR-15	Ball
19	VT-616	Spring
20	1174	Screw, flat head
21	MDR-1	Cap
22	DR-002	Short extension
23	DR-011	Long extension
24	041	Tip, pencil
25	042	Tip, straw
26	DR-001	Stopper assbly
27	24050010	Stopper assbly
28	24050016	Extension clip
29	24050008	Granular outlet
30	24050012	Granular extension
31	24050011	Extension
32	24050014	Extension Velcro
33	24050015	Barrel Velcro

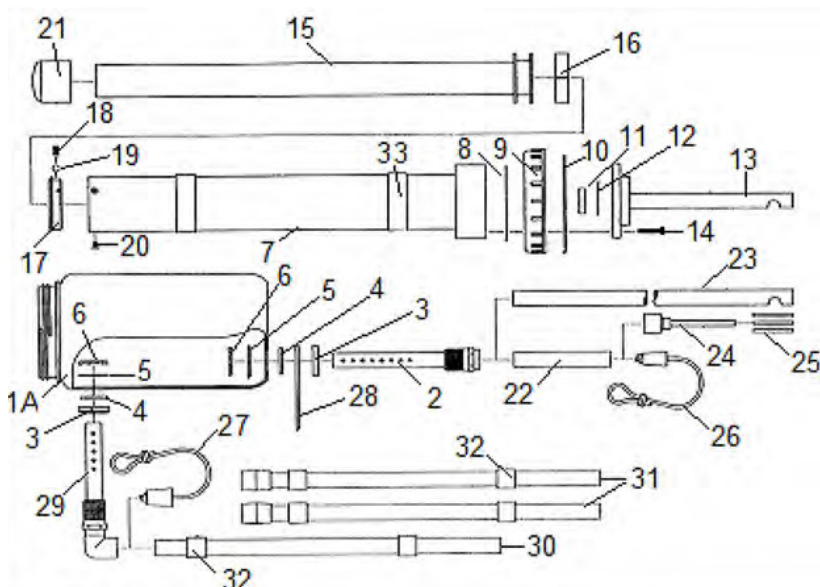

#24050000

2250 ELECTRIC DUST-R

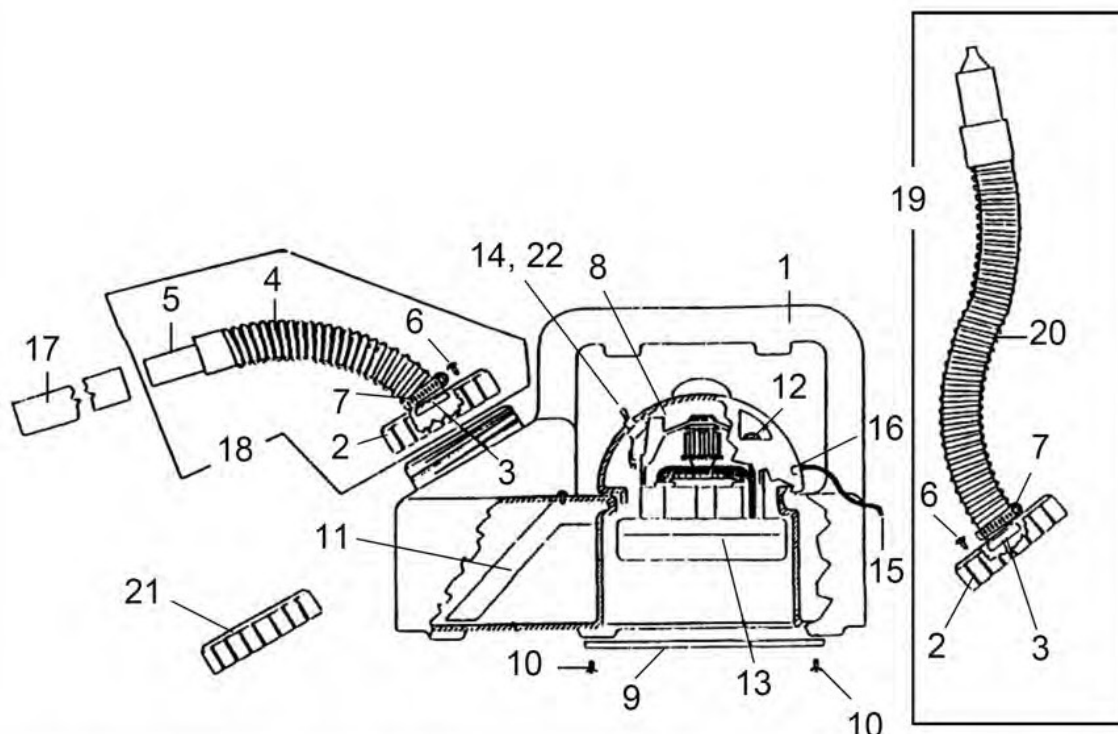

Model 2250 Electric Dust-R

#	Part	Description
1	2251	1.5 gallon tan
2	2255	Cap with liner
3	2256	Flange
4	2257	Flex hose
5	2258	Cuff
6	2260	Screw, #6
7	2261	Clamp
8	2252	Cover
9	2305	Motor guard
10	2306	Screw, #8
11	2253	Duct
12	2308	Screw, #10
13	2323	Motor, 110V, 2 stage
14	2311	Switch, 110V
15	2314	Cord, 110V
16	2315	Strain relief
17	2259	Extensions
18	2263	Discharge unit
19	2264	Void treat discharge
20	2265	Void treat hose
21	2262	Cover with liner
22	990	Boot/switch




#15015605

2200 PRESSURE DUST-R

Model 2200 Pressure Dust-R

#	Part	Order#	Description
1	2216	22055476	Hose
2	2208	22055455	Ball valve
3	2211	22055470	Hex nipple, 1/4"
4	2204	22055435	Head body
5	AC-2113	22054900	Air chuck
6	TG-2108	22054400	Tank gasket*
7	RV-2101	22060750	Relief valve
8	D-51-P	22030400	Valve seal*
9	LR-2118	22055400	Lug ring
10	LH-2102	22053800	Lug handle*
11	2212	22055475	Siphon tube*
12	2202	22025100	Tank, 2 gallon
13	G-2112	22054800	Gauge

**Items not shown*

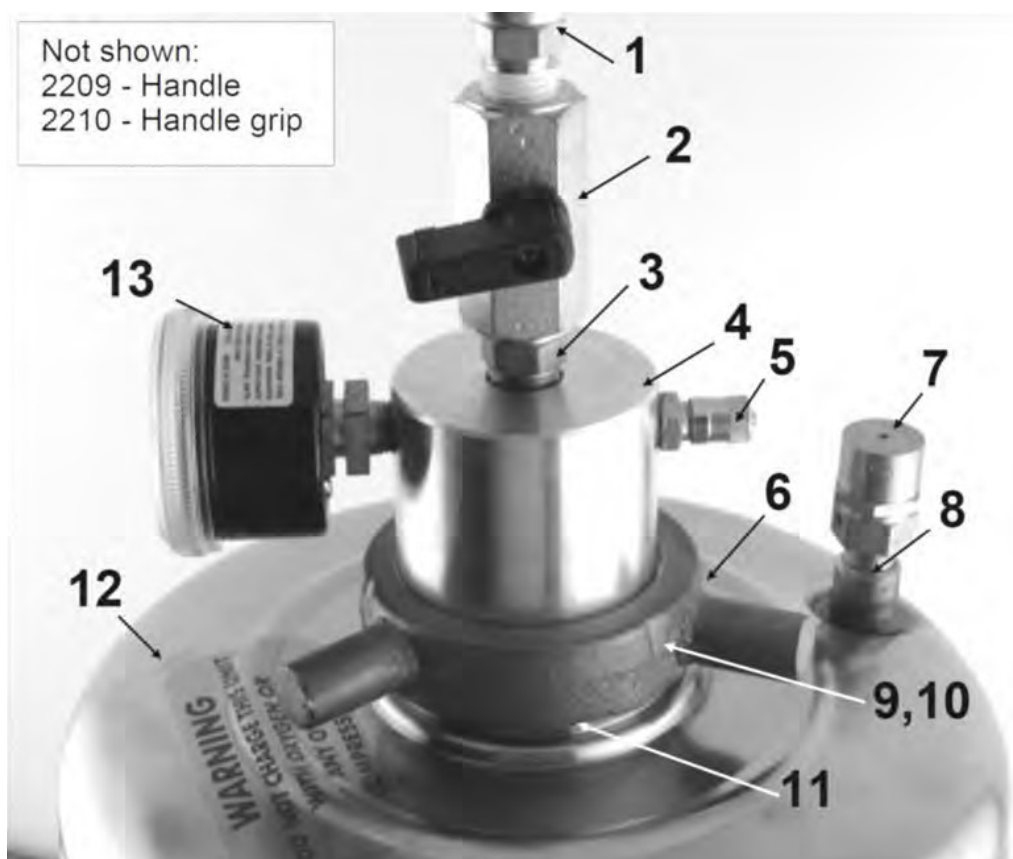

BULB DUSTER



Replacement Parts

Bulb - #22055650

Cap - #22055651

Narrow tip - #22058500

Tip extensions - #95150905

Tip Kit - #1100581

Narrow tip



VERSADUSTER, VERSADUSTER KIT

**Versaduster
#24010900**



**Tip Kit
#24010904**



**Bottles and Tips
#24010902**



**Versaduster Kit
#24010901**



- Kit can be used with the Versafoamer 4000 or the Portable Aerosol Sprayer



#24010901

+

Versafoamer




**Portable Aerosol
Sprayer**



VERSAFOAMER HH

#	Part	Description
1	T-100	Tank, 1 gal., 4 L
2	22025701	Siphon tube
3	HA-298	Adapter, hose
4A	TT-1	Tank top
4D	TB-1	Tank bottom
6	H-71	Hose, 4 ft., 1.2 m
7	D-51-P	Hose washer
8	P-275	Pump handle
9	P-276	Pump lock spring
10	P-274	Pump cap
11	PO-273	Plunger rod, 1 gal., 4 L
12	P-272	Back plate
13	NP-277	Polypropylene cup
14	NP-270	Cup spreader plate
15	P-269A	Lock washer
16	P-269-SS	Plunger nut
17	P-268	Pump gasket
18	PO-267	Pump tube, 1 gal., 4L
19	PV-266	Check valve

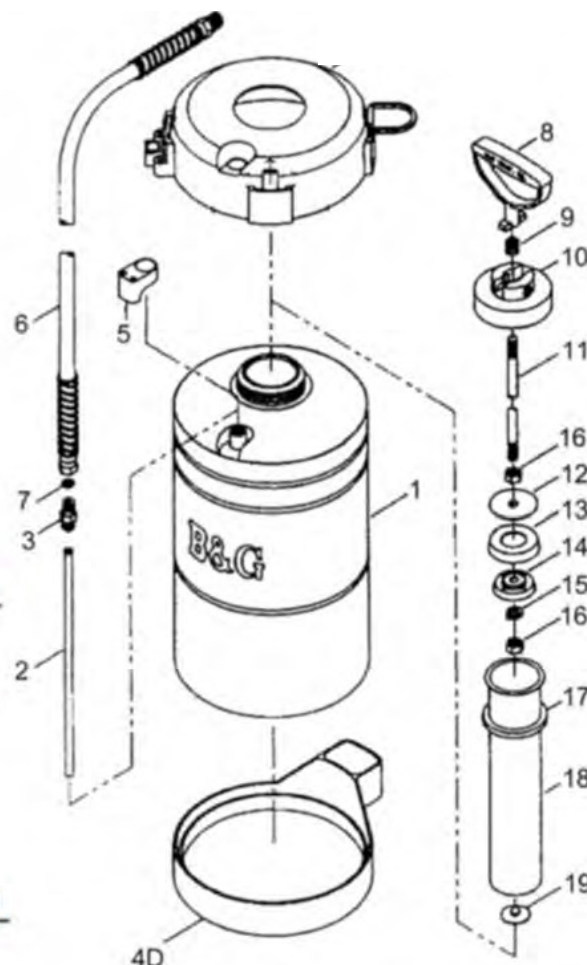

Repair Parts



Foaming Agent Residue Removal




VERSAFOAMER 4000

#	Order #	Description
1	16200007	Compressor, 110V
	16200020	Compressor, 220V
2	16200002	Quick-connect
3	22067312	30-L Gunjet valve
4	22030220	Hose,
5	22026500	Gauge, pressure
6	16200013	Curved tip
7	16200018	Straight tip
8	16200023	Drain application tip



#24040000

Repair Parts

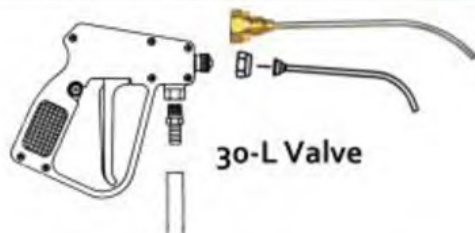

Drain Tip



#16200023
Drain Application Tip


WOOD-TREATMENT SYSTEM

Gun and Hose

#	Order #	Description
41	24040067	30 ft. hose, 3/8 I.D.
	24040086	50 ft. hose, 3/8 I.D.
42	95137800	Fitting, 3/8 hose
43	22067312	Gunjet, 30L
44	22046350	Gasket, seat
45	22037400	Adapter, 1/4 NPT
46	22071813	Socket, quick conct
47	24040069	Straight tip assmb
48	24040073	Wall void tip assmb
49	24040076	Wood tip assmb
50	24040072	Dual tip assmb
51	22071809	Plug, quick conct
52	22033900	Body, nozzle

#	Order #	Description
53	24040071	Tip, straight foam
54	22033100	Cap, tip
55	24040074	Tip, wall void foam
56	24050006	Stopper, wall void
57	24040077	Tip, wood injection
58	22071738	Tee, street 1/4 street
59	22070540	Elbow, street 1/4 NPT

See also page 29

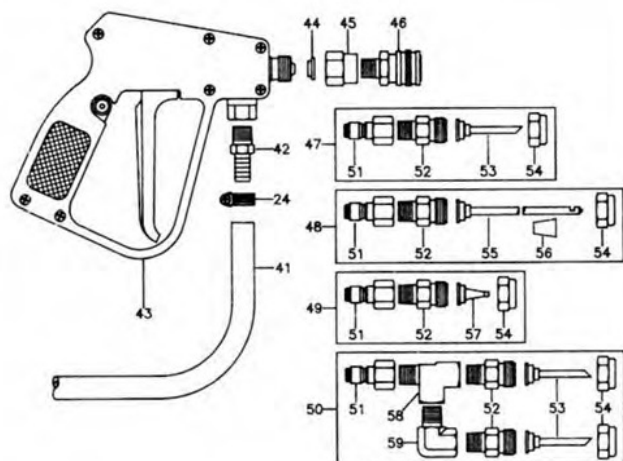

BAIT STATIONS



General Pest Station

Ants Only Station



Base of station
designed to hold
liquid and **granular**



Base of station
designed to hold
liquid bait

General Pest Station

Cap – PPS-1 #24030111



Base – PPS-2 #24030110

3 inch spike – PPS-3 #24030113

6 inch spike – PPS-6 #24030114



Ants Only Station

Cap – PPS-1 #24030111




Base – PPS-2 #24030188

3 inch spike – PPS-3 #24030113

6 inch spike – PPS-6 #24030114



TM-1 TERMITE MONITOR

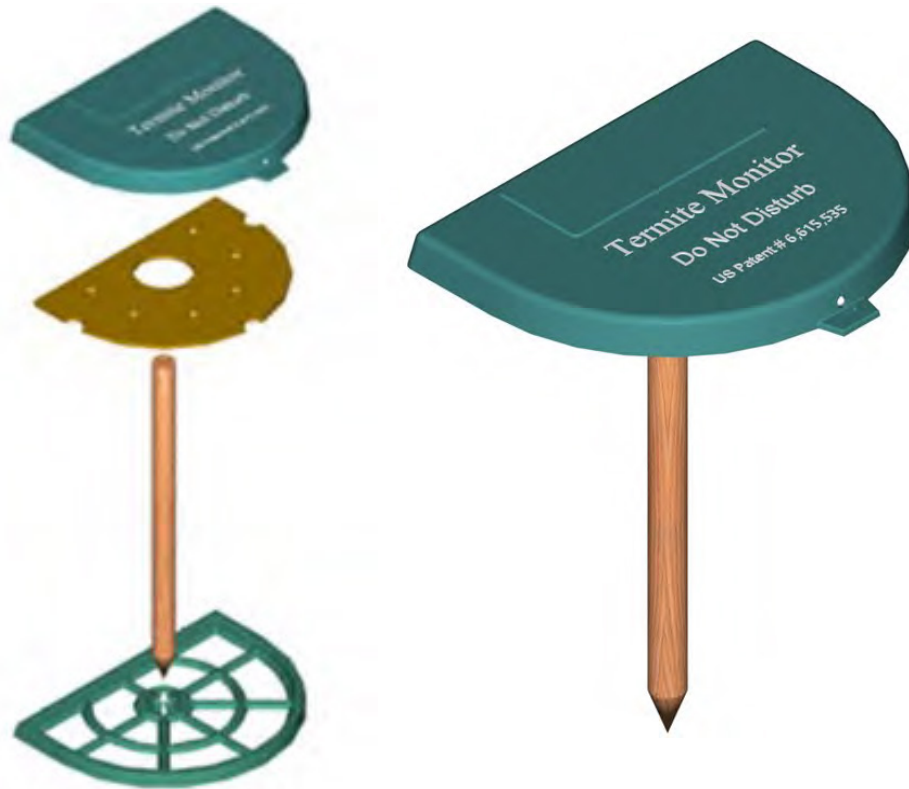

DESCRIPTION	ORDER #
TM – 48/carton, green (plain)	26000004
TM – 48/carton, brown (plain)	26000005
Cardboard Insert (100 pieces)	26000009
Stake Kit (90 pieces)	26000013
TM – 48/carton, green (plain) pallet quantity	26000100
TM – 48/carton, brown (plain) pallet quantity	26000101
TM – 48/carton, green (printed) pallet quantity	26000102
TM – 48/carton, green (printed) half pallet quantity	26000104




#26000009



#26000013

TM-1 TERMITE MONITOR

Monitors can be placed around the outside and around the inside of foundations

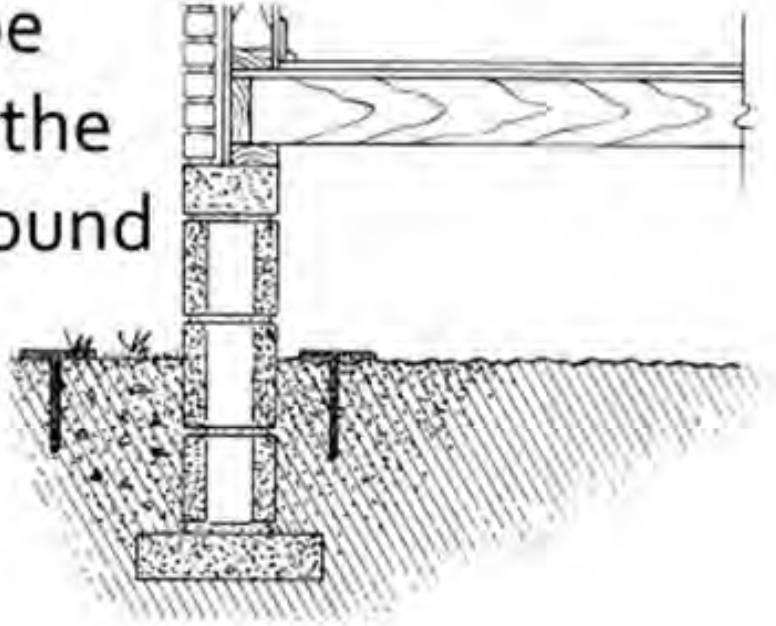


Replace cardboard when damaged by termites

Key #	Part #	Description
20	VB-147	Valve body
21	VT-140	Valve trigger
22	SH-142	Screw housing
23	TS-141	Trigger screw
26	VP-151	Valve packing washers
27	LN-149	Lock nut
28	AS-148	Adjustment screw
29	SR-161	Snap ring
30	SL-162	Safety lock nut
32	MS-145-50	50 mesh strainer
33	SS-144	Strainer support
31	NG-146	Nylon gasket
34	SA-143	Strainer housing
35	VC-152	Valve cable – 9 in.
	VC-153	Valve cable – 18 in.
	VC-163	Valve cable – 24 in.
36	VE-154	Valve extension – 9 in.
	VE-152	Valve extension – 18 in.
	VE-164	Valve extension – 24 in.
37	VS-156	Seat stem spring
38	SSL-157	Seat stem nut
39	SS-158	Seat stem
40	SP-159	Soft seat gasket
42	9751-M	Multeejet tip holder
43	4190	Viton gasket
44	5800-CC	Multeejet C-C tip
45	4596	Tip retainer



Part #24 Packing Nut:

PN-150-1 valves made before 2000

PN-150-2 valves made after 2000

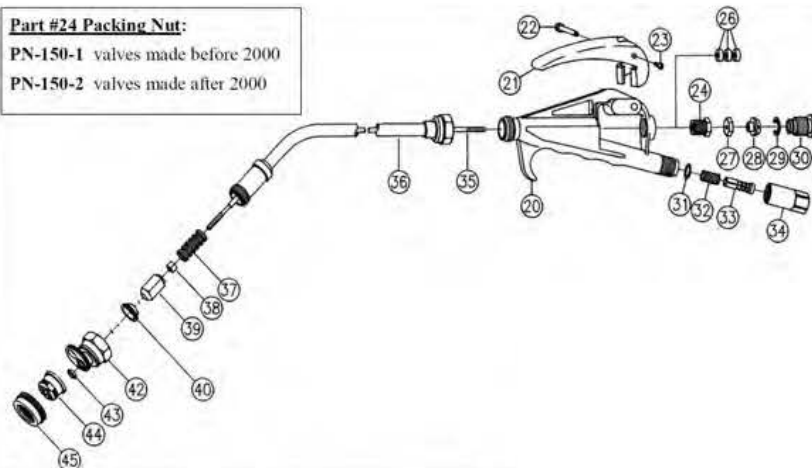**XR VALVE**# Order # Description


- | | | |
|---|----------|-------------------------|
| 1 | 22037500 | Valve assembly |
| 2 | 22037510 | XR Valve Kit |
| | | Valve stem sub-assembly |
| | | Brass guide |
| | | O-ring #1 |
| | | Gasket, copper |
| | | Valve spring |
| 3 | 22037503 | Handle |
| 4 | 22037508 | O-ring (Viton) |
| 5 | 22037501 | XR Valve body |

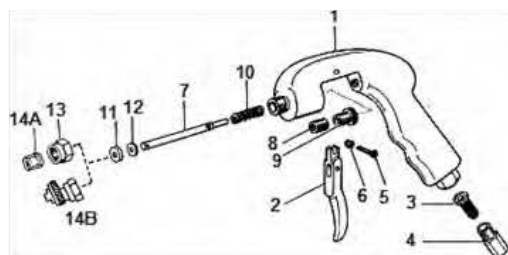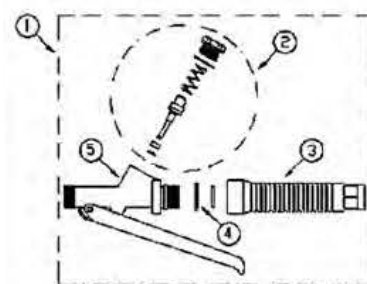**Ban-Drip Valve**# Part Description

- | | | | | | |
|---|-------|----------------------|-----|--------|------------------------|
| 1 | VB-40 | Valve body | 8 | PN-47 | Brass packing nut |
| 2 | VT-41 | Valve trigger | 9 | RP-48 | Rod packing |
| 3 | SA-42 | Mesh strainer | 10 | RS-49 | Rod spring |
| 4 | SB-43 | Pipe thread strainer | 11 | SGH-50 | Seat gasket holder |
| 5 | TS-44 | Trigger screw | 12 | TSG-51 | Seat gasket |
| 6 | TN-45 | Trigger nut | 13 | TC-52 | Tip cap |
| 7 | VR-46 | Valve rod and pin | 14A | 800067 | Fine fan tip |
| | | | 14B | 5850 | Multeejet tip assembly |

Stainless Steel Sprayer

- | # | Part | Description | # | Part | Description |
|----|------------|----------------------|----|----------|--------------------------|
| 1 | T-50 | Tank, 2 L | 8 | P-275 | Pump handle |
| | T-100 | Tank, 4 L | 9 | P-276 | Pump lock spring |
| | T-200 | Tank, 7.6 L | 10 | P-274 | Pump cap |
| | T-300 | Tank, 11.3 L | 11 | PH-273 | Plunger rod, ½ gal. |
| | T-500 | Tank, 5 L | | PO-273 | Plunger rod, 1 gal. |
| 2 | HS-297 | Siphon tube, 2 L | | PF-265 | Plunger rod, 2 gal., 5 L |
| | OS-297 | Siphon tube, 4 L | | PT-265 | Plunger rod, 3 gal. |
| | TS-297 | Siphon tube, 7.6 L | 12 | P-272 | Back plate |
| | THS-297-01 | Siphon tube, 11.3 L | 13 | NP-277 | Polypropylene cup |
| | FS-297 | Siphon tube, 5 liter | 14 | NP-270 | Cup spreader plate |
| 3 | HA-298 | Adapter, hose | 15 | P-269A | Lock washer |
| 4A | TT-1 | Tank top (1 gal.) | 16 | P-269-SS | Plunger nut |
| 4D | TB-1 | Tank bottom | 17 | P-268 | Pump gasket |
| 5 | 5700-H | Tip holder | 18 | PH-267 | Pump tube, ½ gal. |
| 6 | D-50 | Hose, 4 ft. red | | PO-267 | Pump tube, 1 gal. |
| 7 | D-51-P | Hose washer | | PF-267 | Pump tube, 2 gal. |
| | | | | PT-267 | Pump tube, 3 gal. |
| | | | 19 | PV-266 | Check valve |

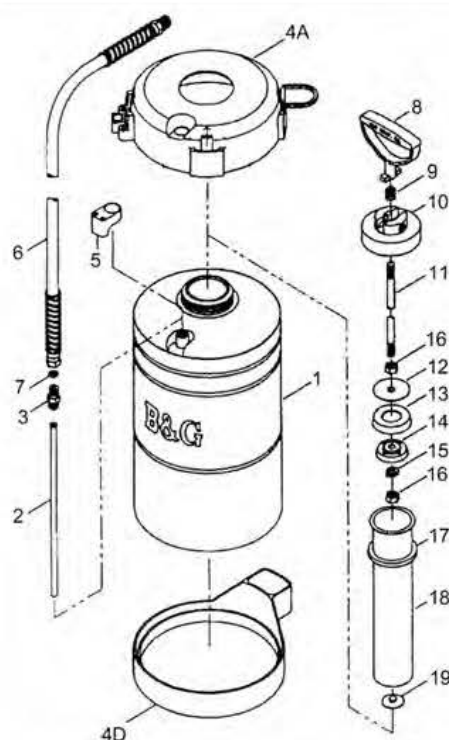


REPAIR AND MAINTENANCE OF B&G SPRAYERS

EXTENDA-BAN VALVE REPAIR AND MAINTENANCE


- 1** Detach the Valve and Extension from the hose.

Carefully remove the mesh strainer. Squeeze the Trigger to drain all liquid from the Valve.

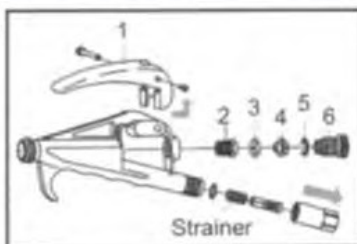


- 2** Remove the Trigger (1), then the Snap ring (5), Safety lock nut (6), the Adjustment screw (4), the Lock nut (3), and then the Packing nut (2). The Trigger can be removed by moving it to the back of the Valve.



- 3** Unscrew the extension at the front of the valve. The extension can be pulled away from the valve along with the interior steel cable.

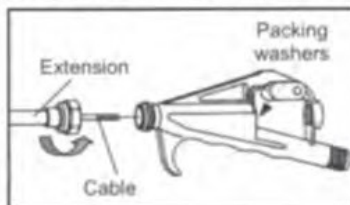

- 4** Packing washers (white) that were at the end of the cable will remain inside the valve. Carefully dislodge and remove these washers.

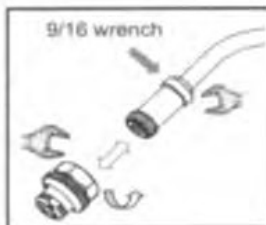


- 5** Remove the tip and nozzle assembly from the end of the extension, be careful to keep the Soft seat gasket. **Use 2 wrenches to loosen the tip:** one to hold the extension, and a second to loosen the tip. **Note: the extension may become twisted and unusable unless 2 wrenches are used to remove the tip.** Inspect the soft seat gasket and the small O-ring on Multeejet tips, replace if damaged or worn. Replace the nozzle if it is more than 2 years old.

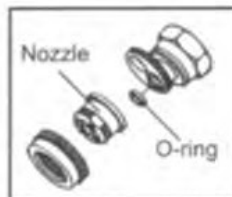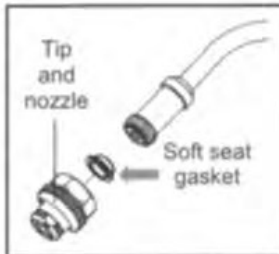


- 6** Push the cable out the front of the Extension to expose the Spring, the small Lock nut, and the Seat stem. Unscrew the Seat stem and Lock nut, and slide off the Spring. Place these small pieces in a closed container (they are easily misplaced).




- 7** Remove the stainless steel cable by pulling it slowly through the **back end of the Extension** – you cannot pull the cable through the front of the Extension. The threaded end of the cable at the nozzle end is short and easily passes through the curve in the Extension. The end of the cable at the valve end is long and will not pass through the curve. Replace the cable if it is worn or damaged.

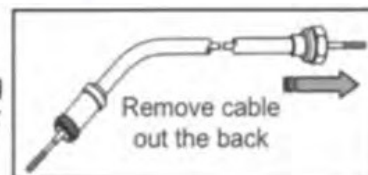


- 8** Re-assemble the Extension by inserting the short end of the cable into the back so that threads are exposed at the nozzle end.

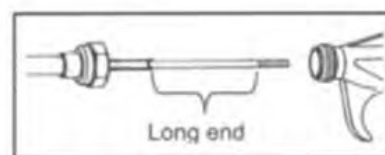


- 9** Slide the Spring onto the end of the cable, then the Seat stem lock nut. Screw lock nut to leave **about 4 threads** at the base of the end of the cable.

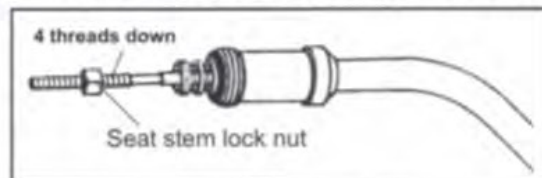

- 10** Attach the Seat stem onto the cable, in front of the Lock nut. Hand tighten Seat stem against the lock nut.

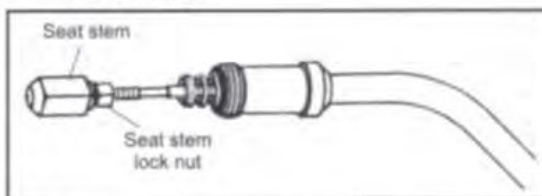


- 11** Insert the long end of the cable into the front end of the valve. Push the cable through the valve until the end is through the back of the valve. Tighten Extension to the valve body.

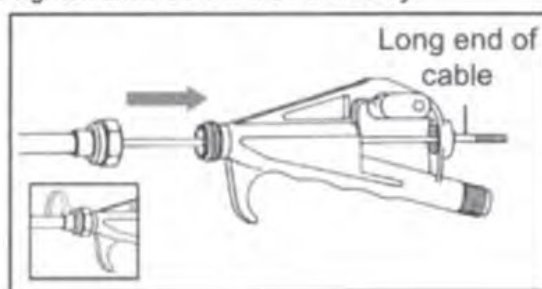

12


Insert 2 or 3 Packing washers onto the cable, then slide on the Packing nut behind the washers and tighten.

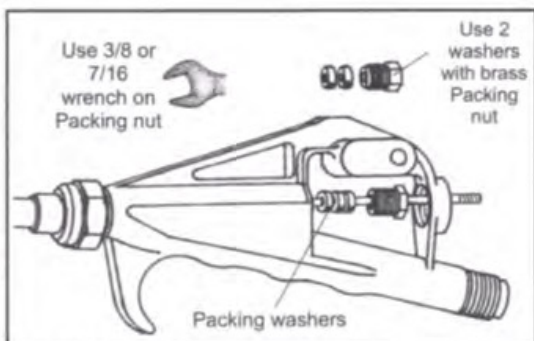

- Valves built **before 1999** have a stainless steel Packing nut that takes 3/8 wrench, there is no internal O-ring, these valves need 3 washers.
- Valves built **between 1999 and 2000** have a brass Packing nut + O-ring, this nut takes a 7/16 wrench, these valves need 2 washers.
- Valves built **after 2000** have a stainless steel Packing nut + O-ring, this nut takes a 3/8 wrench, and these valves require 3 washers.


13

Screw onto the cable the Lock nut and the Adjustment screw. Turn the Adjustment screw so the end of the cable is level to the top of the slot in the top of the screw. Tighten the Lock nut against the screw.

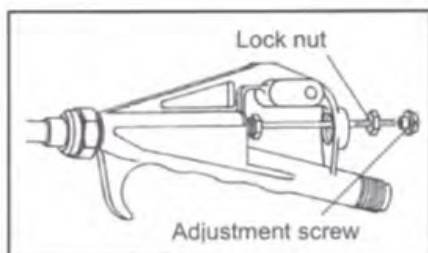


14

Attach the valve trigger by inserting it into the space between the Lock nut and Adjustment screw, then insert the Trigger screw.

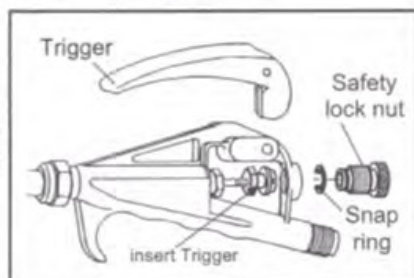


15

Screw the Safety lock nut into the valve body, and then attach the Snap ring.

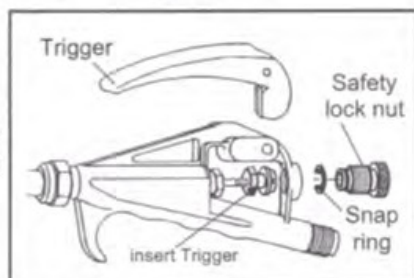


16

Attach the tip and nozzle to the end of the Extension, make certain the Soft seat gasket is facing correctly. The small end faces the Extension. Press the Trigger to retract the Seat stem into the Extension, then attach the tip and nozzle.

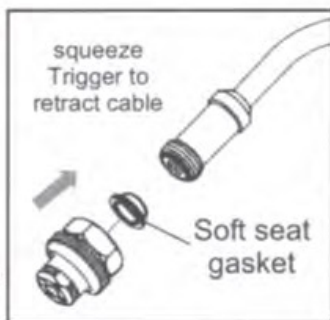

STAINLESS STEEL SPRAYER

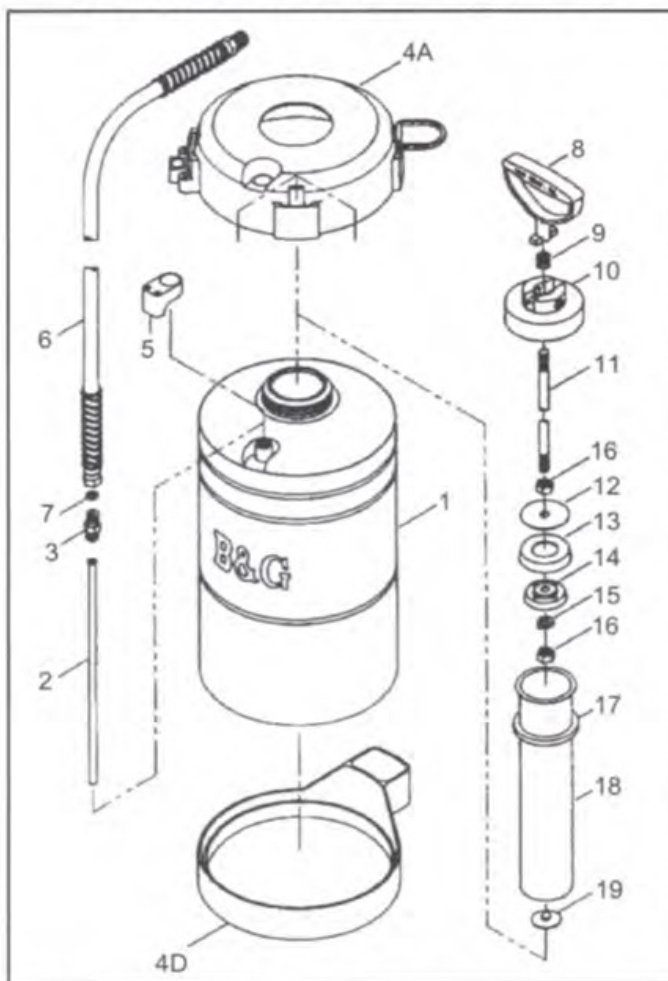

#	PART #	ORDER #	DESCRIPTION
1	T-50	22024800	Tank - 1/2 Gallon
	T-100	22025000	Tank - 1 Gallon
	T-200	22025100	Tank - 2 Gallon
	T-300	22025200	Tank - 3 Gallon
	T-500	22025250	Tank - 5 Liter
2	HS-297	22025600	Siphon tube - 1/2 Gallon
	OS-297	22025700	Siphon tube - 1 Gallon
	TS-297	22025800	Siphon tube - 2 Gallon
	THS-297-01	22025901	Siphon tube - 3 Gallon
	FS-297	22025950	Siphon tube - 5 Liter
3	HA-298	22025300	Adapter - hose
4A	TT-1	22049476	Tank top (1 Gallon)
4D	TB-1	22049477	Tank bottom
5	5700-H	22049475	Tip holder
6	D-50	22030100	Hose - 4 ft. red
7	D-51-P	22030400	Hose washer
8	P-275	22029800	Pump handle
9	P-276	22029900	Pump lock spring
10	P-274	22029700	Pump cap
11	PH-273	22029400	Plunger rod - 1/2 Gallon
	PO-273	22029500	Plunger rod - 1 Gallon
	PF-273	22029650	Plunger rod - 2 Gallon - 5 Liter
	PT-273	22029600	Plunger rod - 3 Gallon
12	P-272	22029200	Back plate
13	NP-277	22029000	Polypropylene cup
14	NP-270	22028600	Cup spreader plate
15	P-269A	22028400	Lock washer
16	P-269-SS	22028250	Plunger nut
17	P-268	22028000	Pump gasket
18	PH-267	22027400	Pump tube - 1/2 Gallon
	PO-267	22027500	Pump tube - 1 Gallon
	PF-267	22027650	Pump tube - 2 Gallon
	PT-267	22027600	Pump tube - 3 Gallon
19	PV-266	22027200	Check valve

Contact us to learn more:

800-544-8811

bgequip.com

135 Region South Drive

Jackson, GA 30233



CURTIS DYNA-FOG[®] Ltd. SYNERGETIC[®]